


CASIO®

Service Manual

(without price)

PZ-3100

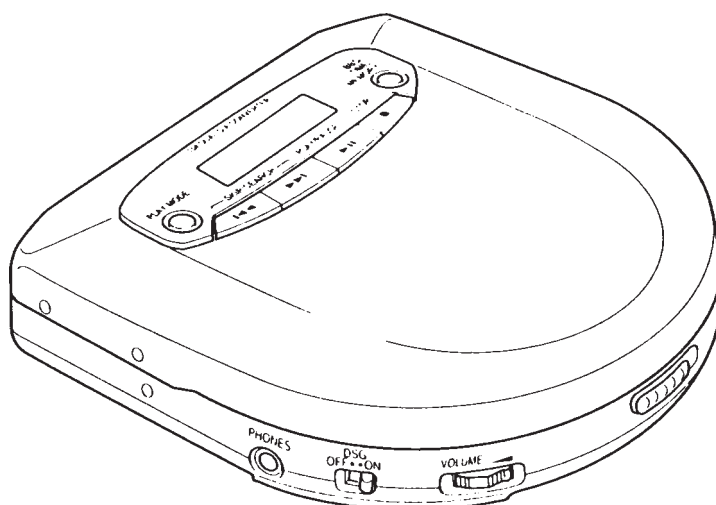

Model-B: USA

Model-C: Europe

INDEX


PORTABLE CD PLAYER

CONTENTS

Disassembly Instructions	1
CD Adjustment	2
Block Diagram	3
Troubleshooting	4
PCB Views	11
CD Amplifier PCB Top View	11
CD door PCB Top View	11
CD AMP PCB Bottom View	12
Wiring Diagram	13
IC Lead Identification and Internal Diagrams	14
Schematic Diagrams	21
Parts List	23
Exploded Views	29
Cabinet	29
CD Mechanism	30

DISASSEMBLY INSTRUCTIONS




1. Remove five screws (A) holding the case assembly.
2. Remove the CD mechanism unit.
3. Remove screw (B) holding the CD AMP unit.
4. Remove screw (C) and pull out the shaft holding the CD door.
5. Remove four screws (D) holding the display PCB unit.

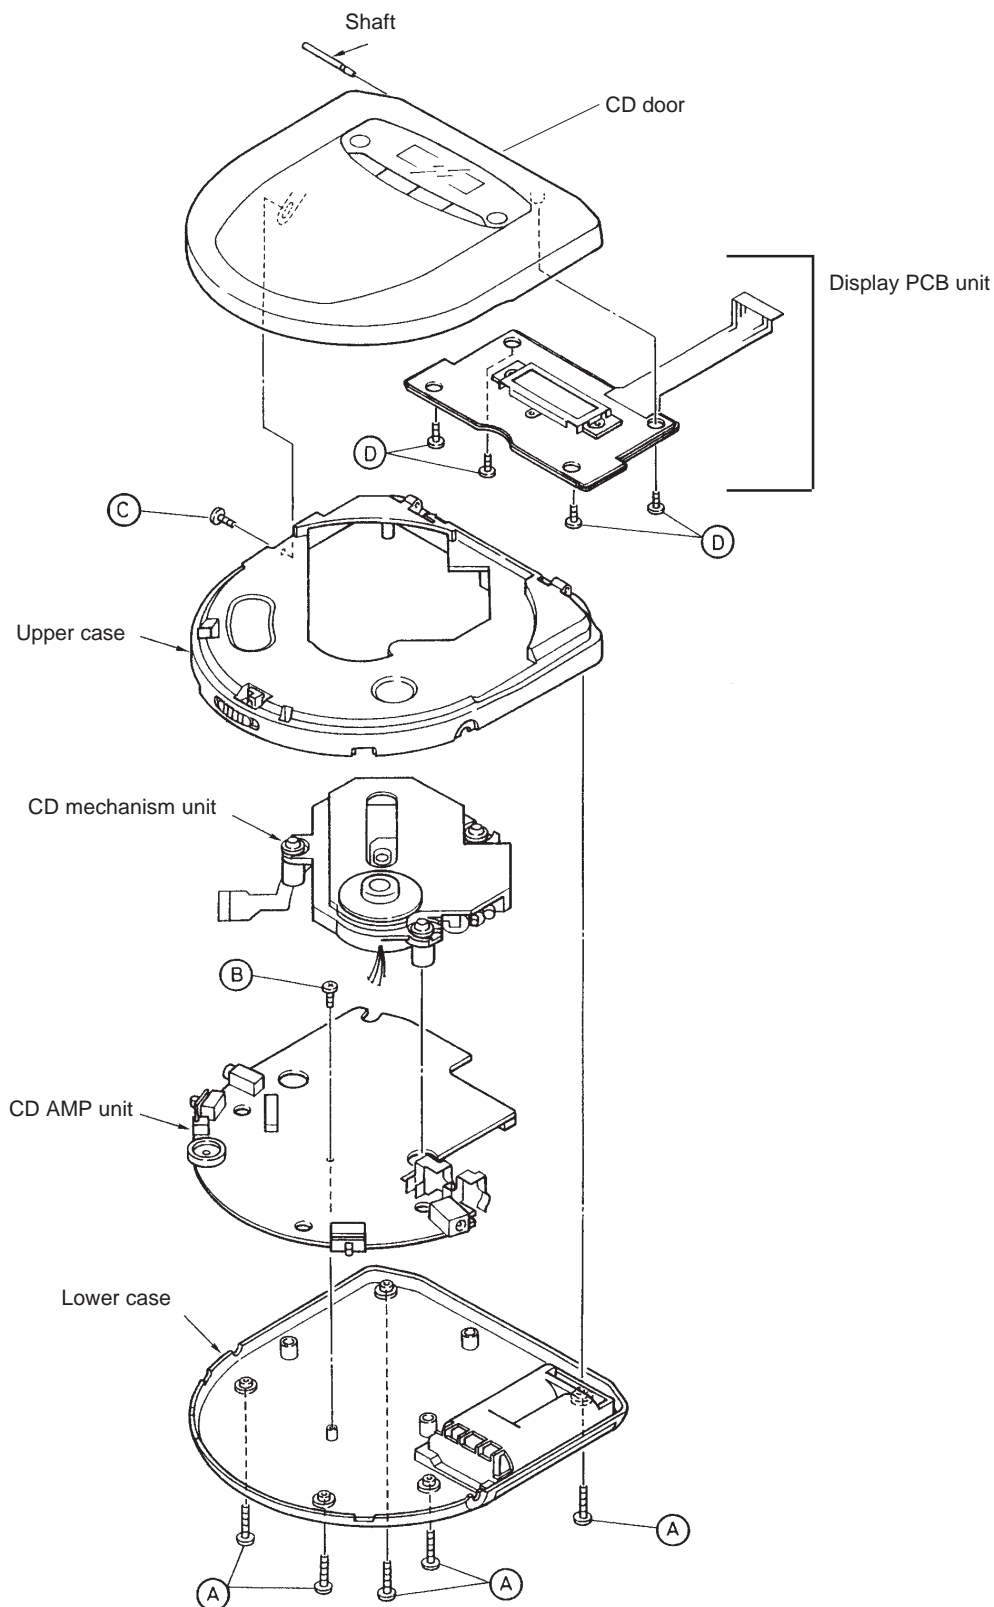

CD ADJUSTMENT

Precautions

To prevent damage caused by static electricity, the following procedures for grounding is required or repairing the unit.

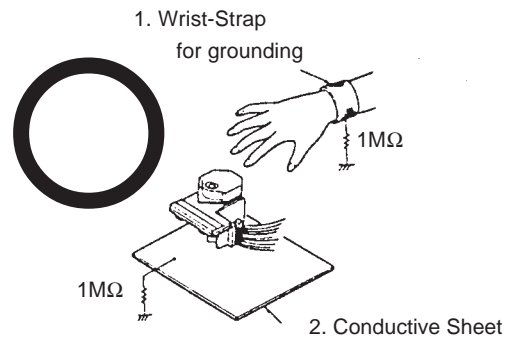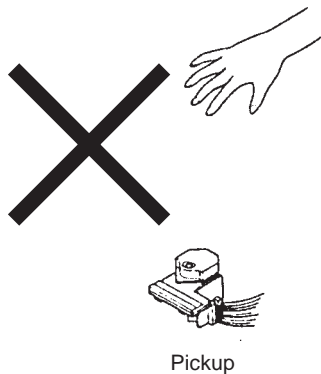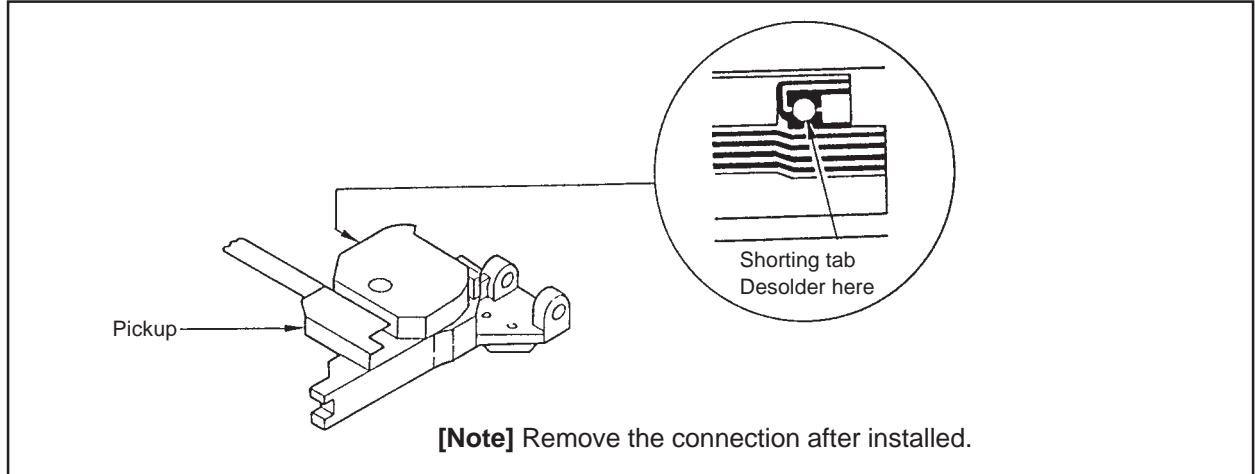

1. Grounding for the human body

Be sure to put on a wrist-strap for grounding (with impedance lower than $10^6 \Omega$) whose other end is grounded. The strap works to drain away the static electricity build-up on the human body.

2. Grounding for the work table

Be sure to lay on the table a conductive sheet (with impedance lower than $10^6 \Omega$) such as a sheet of copper which is grounded.


3. As static electricity build-up on clothes is not drained away, be careful not to let your clothes touch the unit.

4. The short-pad on the pick-up PCB of a spare part is short-circuited for protection during shipment. To open the short circuit, remove the soldering quickly with a soldering iron whose insulation resistance is larger than $10M\Omega$ after connection to a suitable APC circuit.


Equipment Required

- Multi Meter
- Oscilloscope
- Compact Disc
- Dummy Load 10 k Ω


BLOCK DIAGRAM

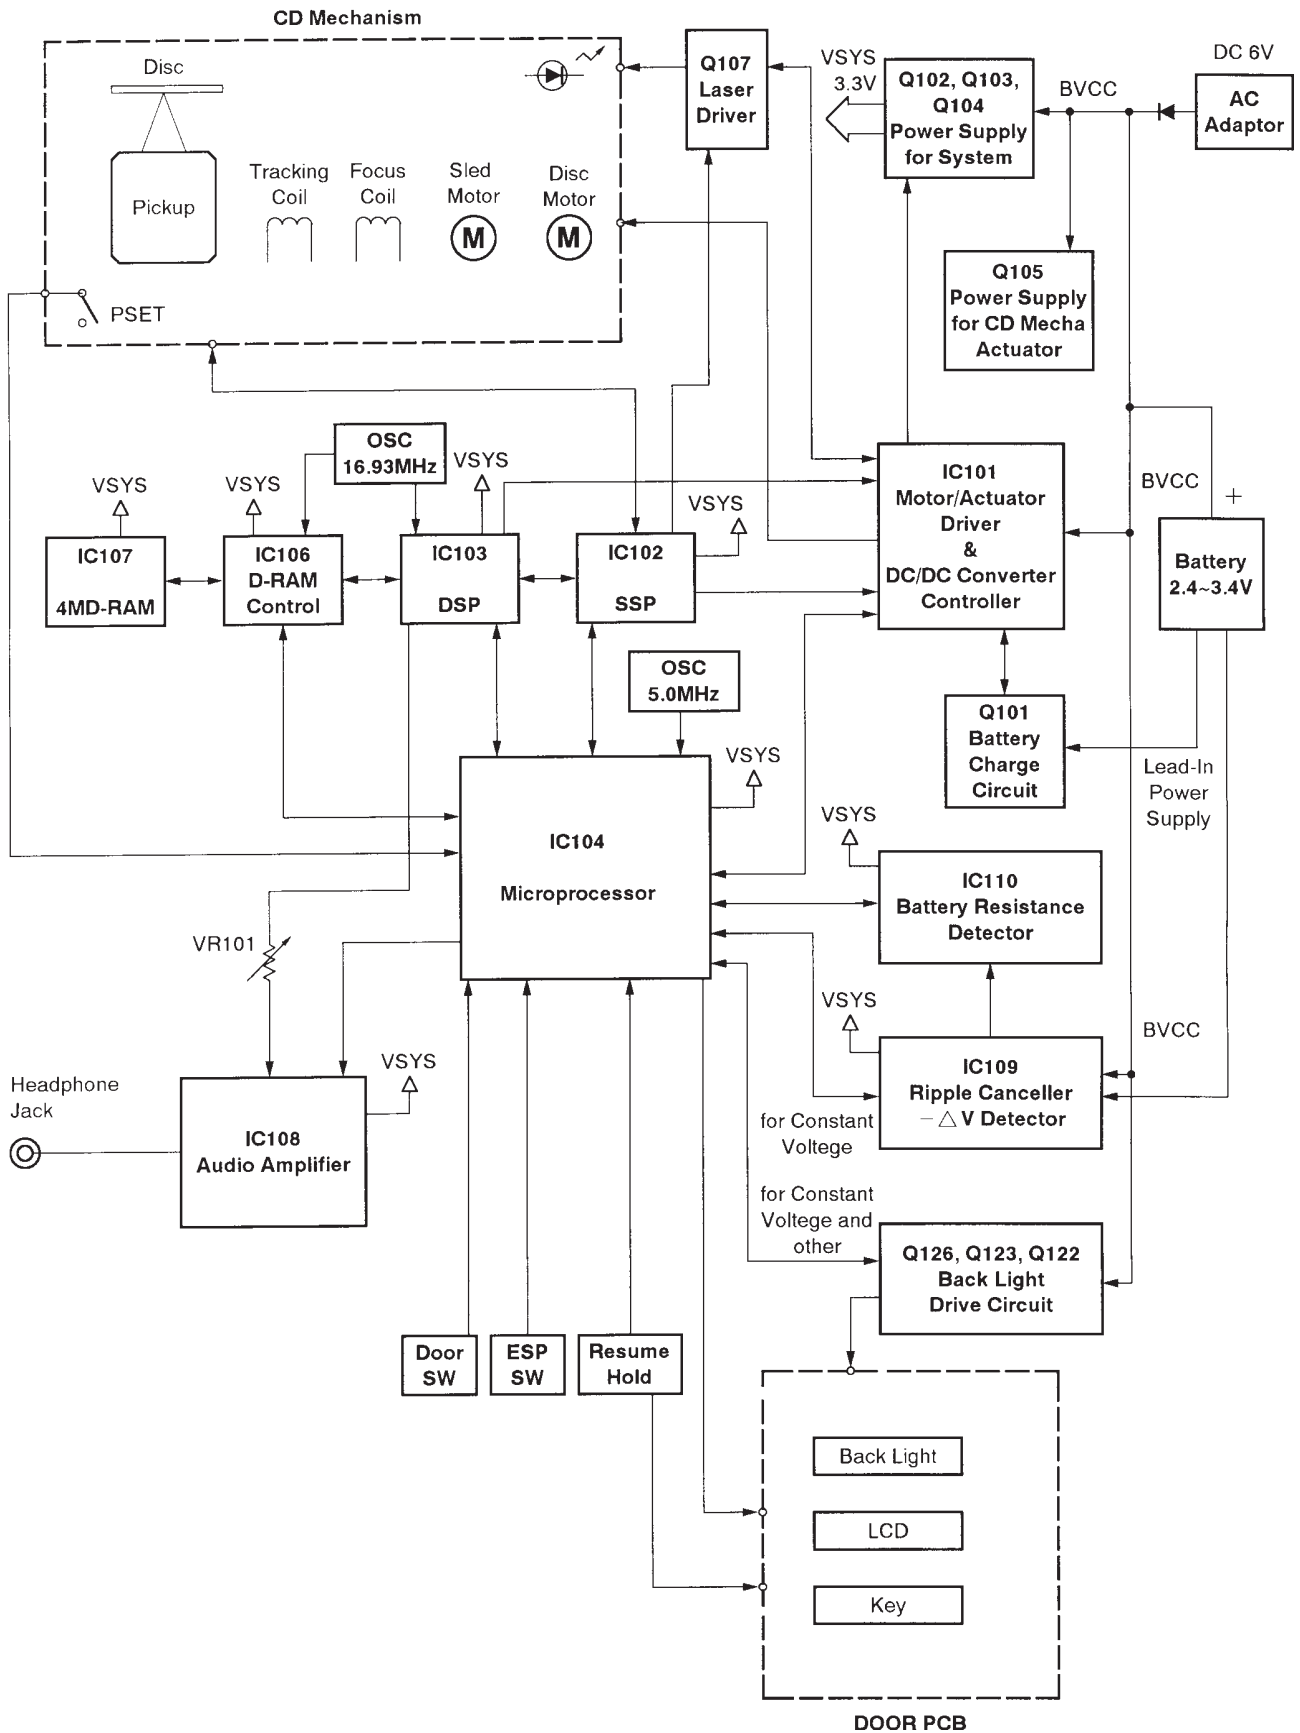


TROUBLESHOOTING

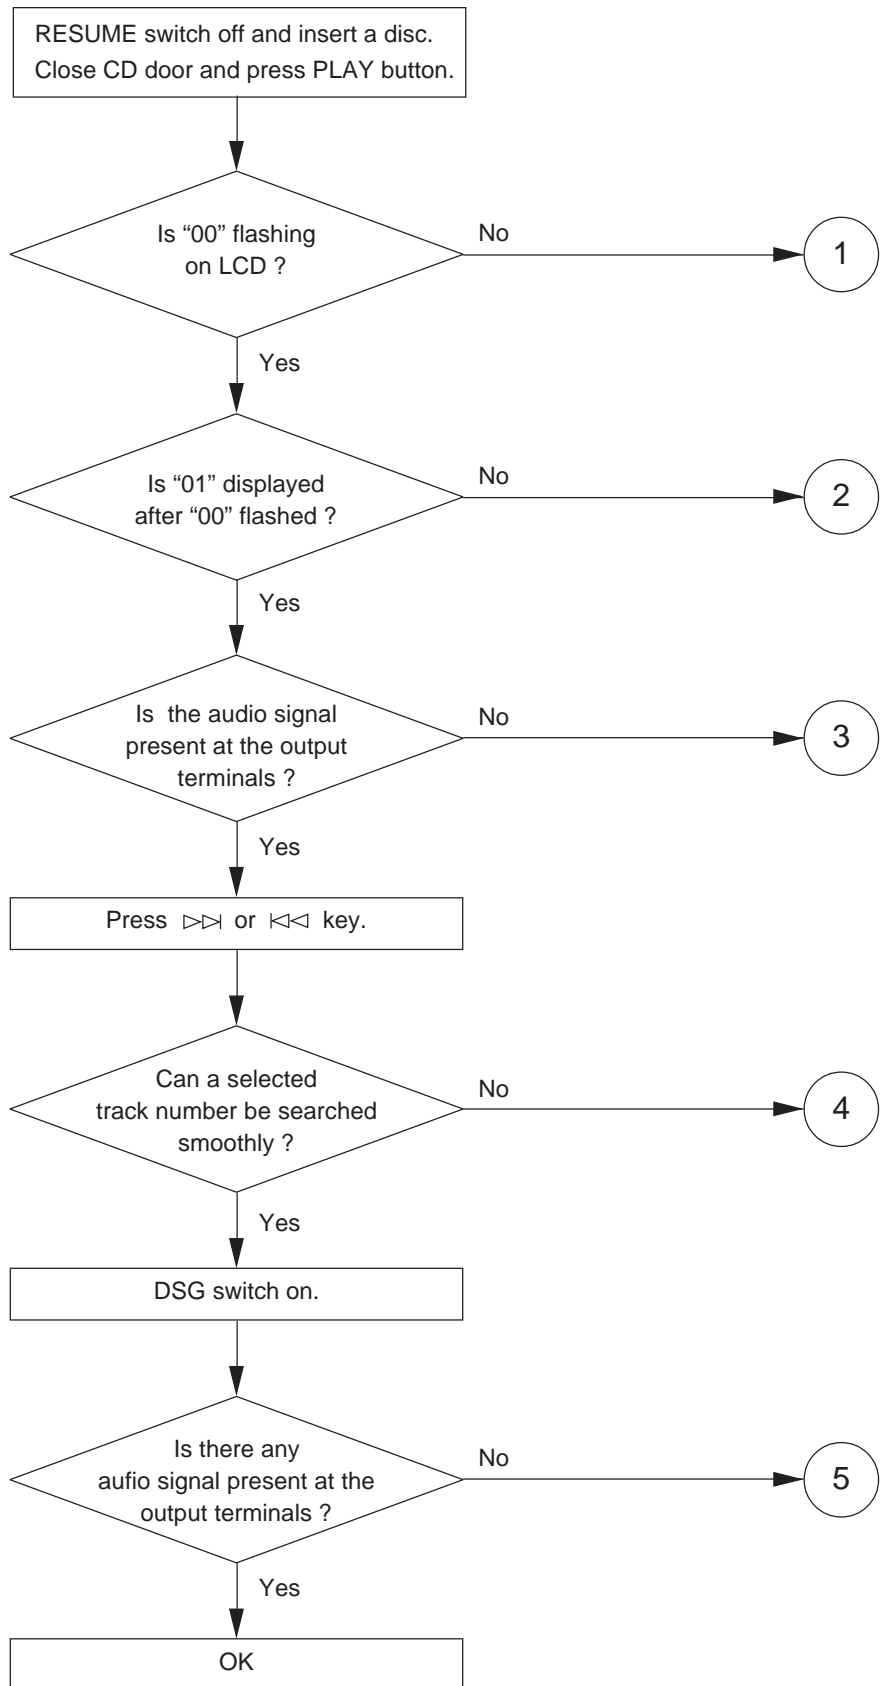

Repair Item 1: At power on, “00” is not displayed.

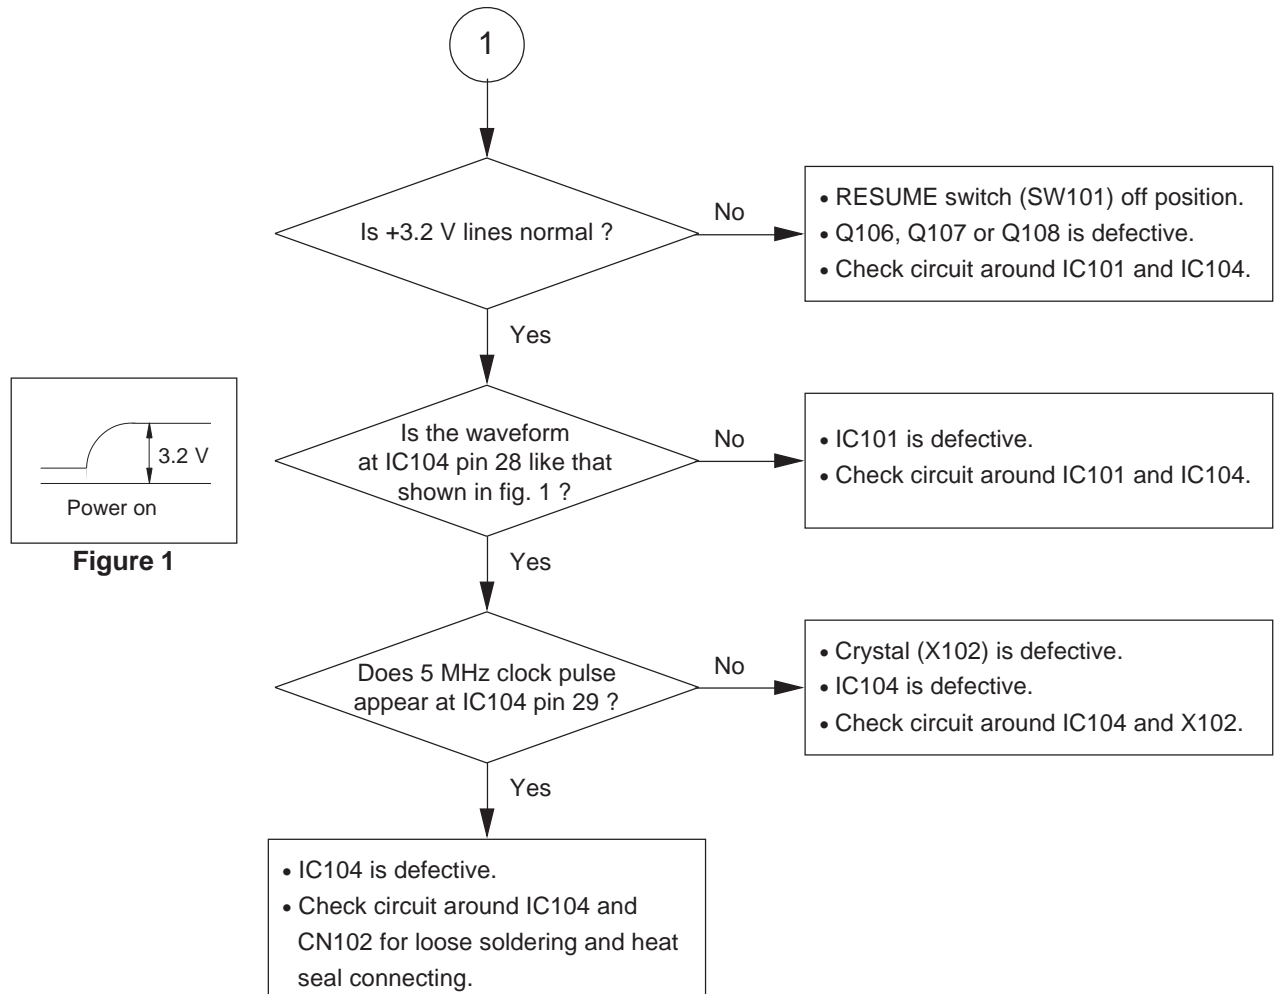


Repair Item 2: “-- --” is displayed instead of playing first song track.

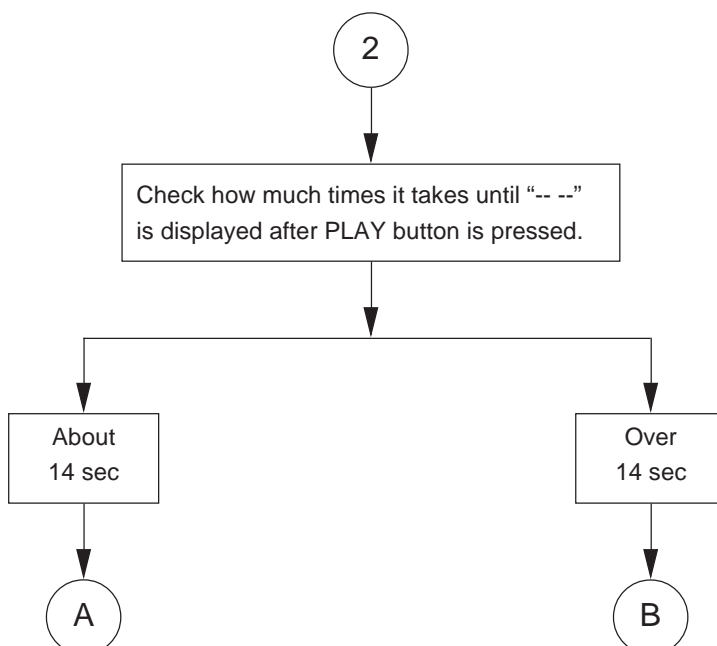


Repair Item 2-A


⚠ Note: Connect GND to door switch by removing the top cabinet. Then open the top cover and check the radiation power with an optical power meter. If an optical power meter is not available, watch the radiation through the lens of the pickup unit at a minimum distance of 30 cm from the pickup unit.

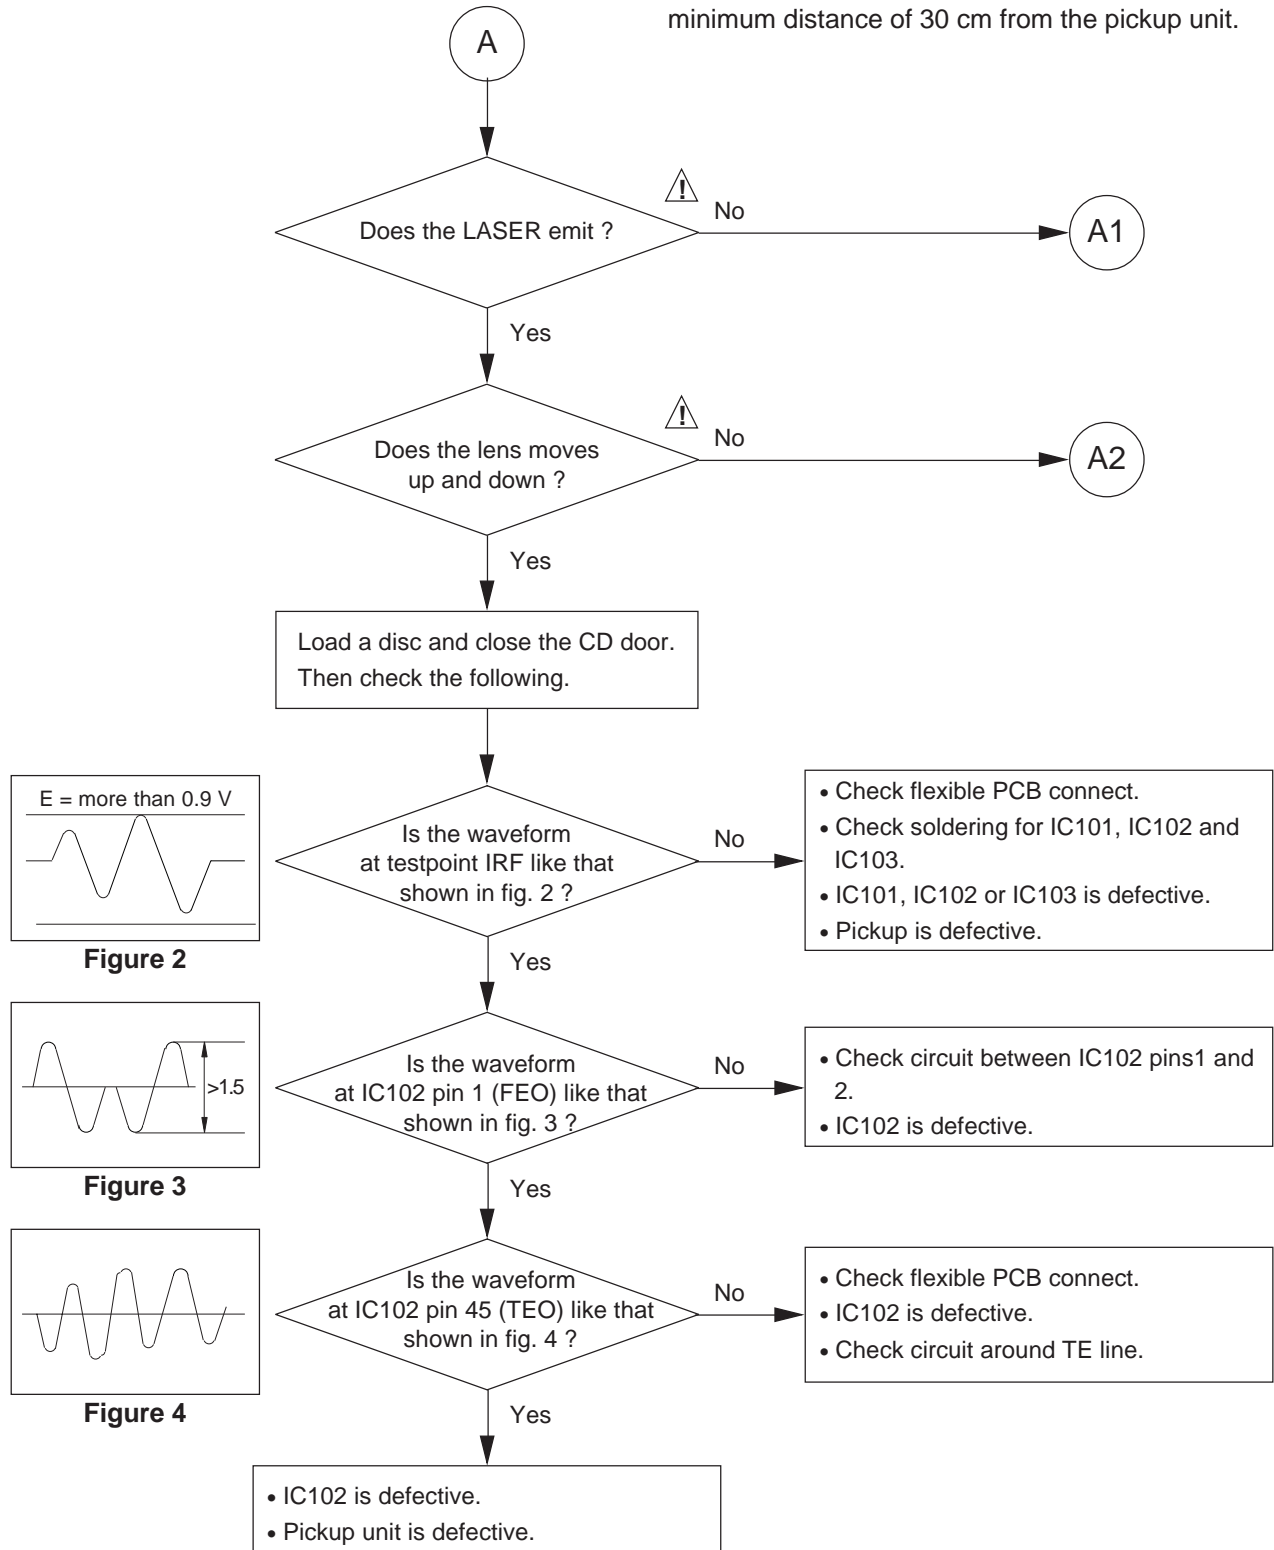


Repair Item 2-A1: Laser does not emit.

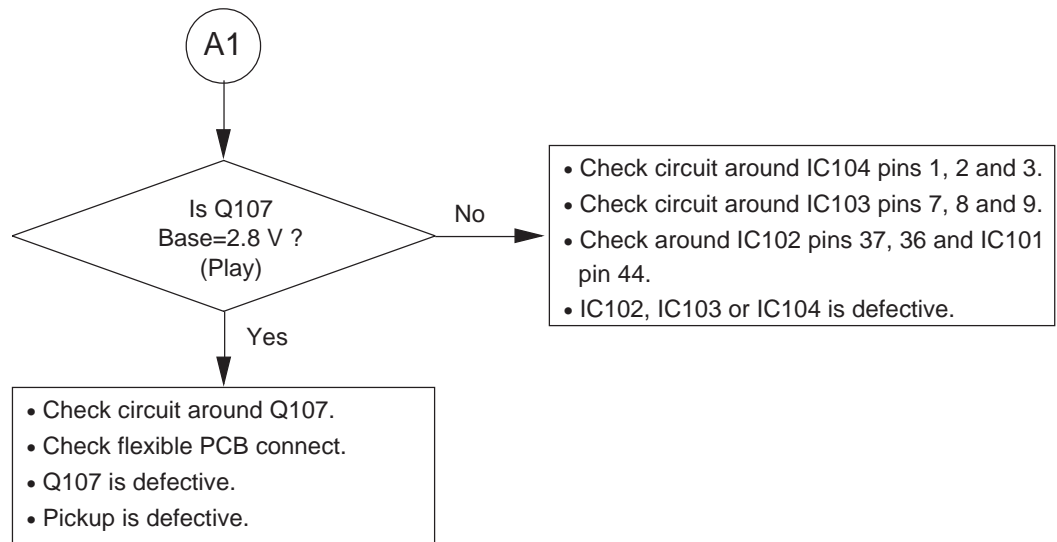


Repair Item 2-A2: Object lens of pickup unit does not move up and down.

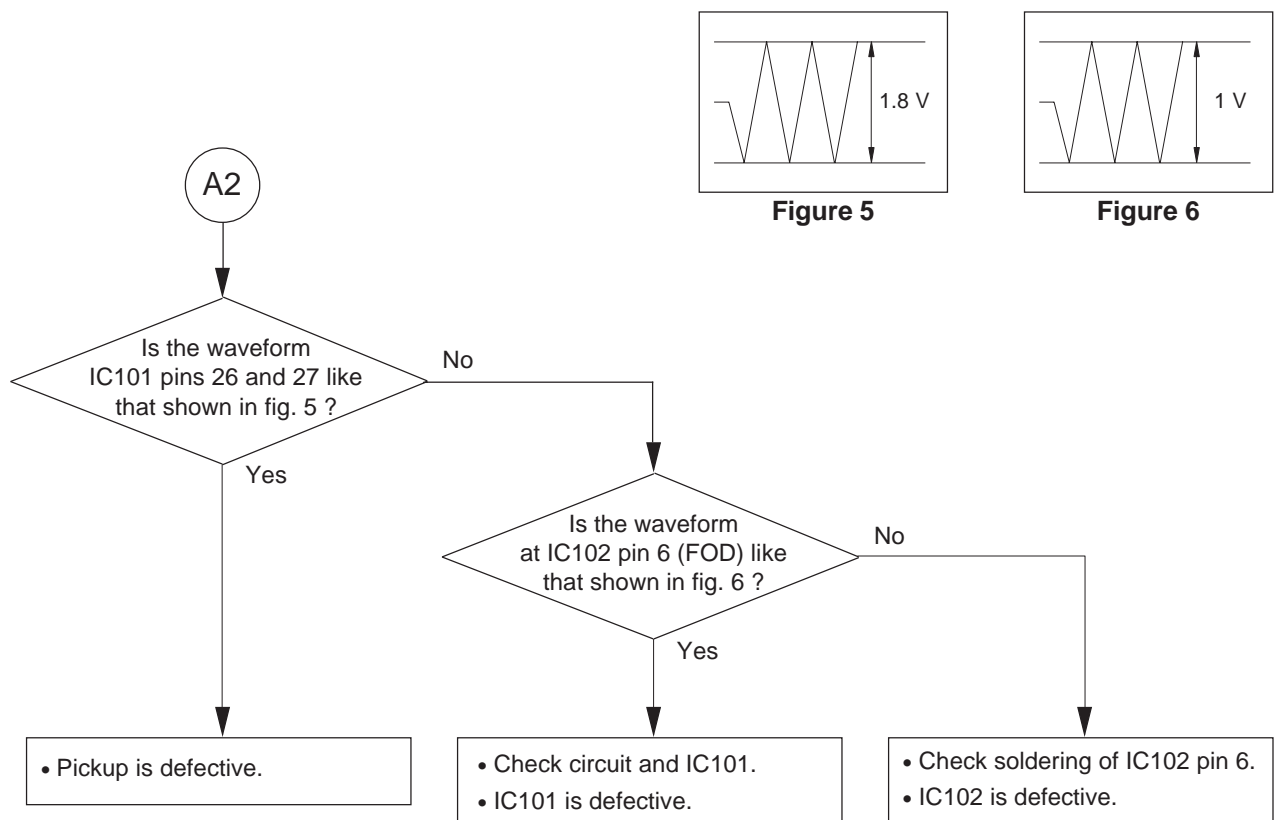


Repair Item 2-B

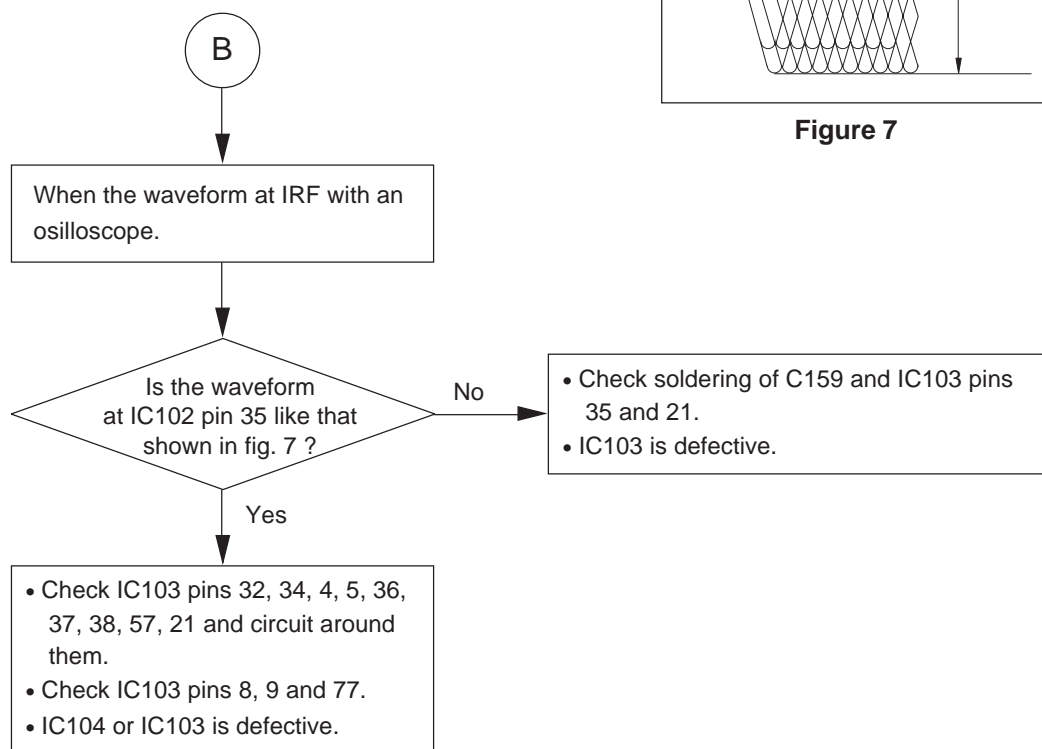


Repair Item 3: No audio signal.

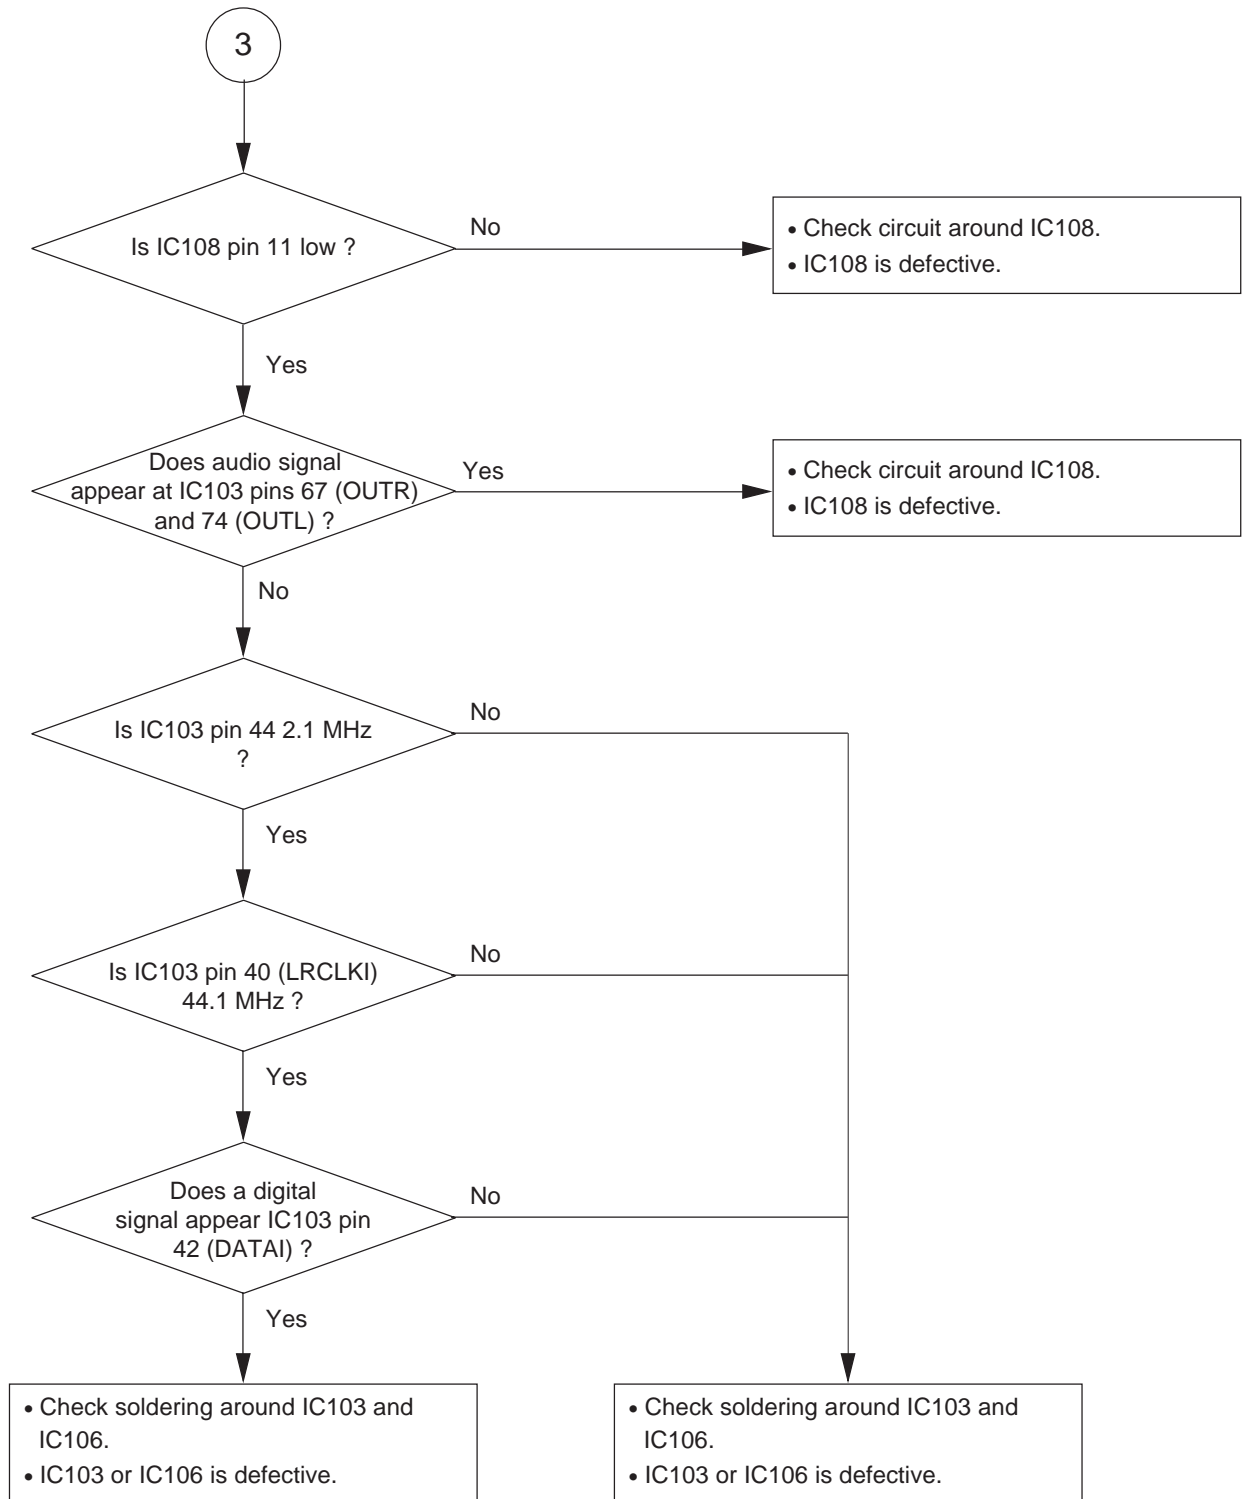


Repair Item 4: Selected track number cannot be searched.

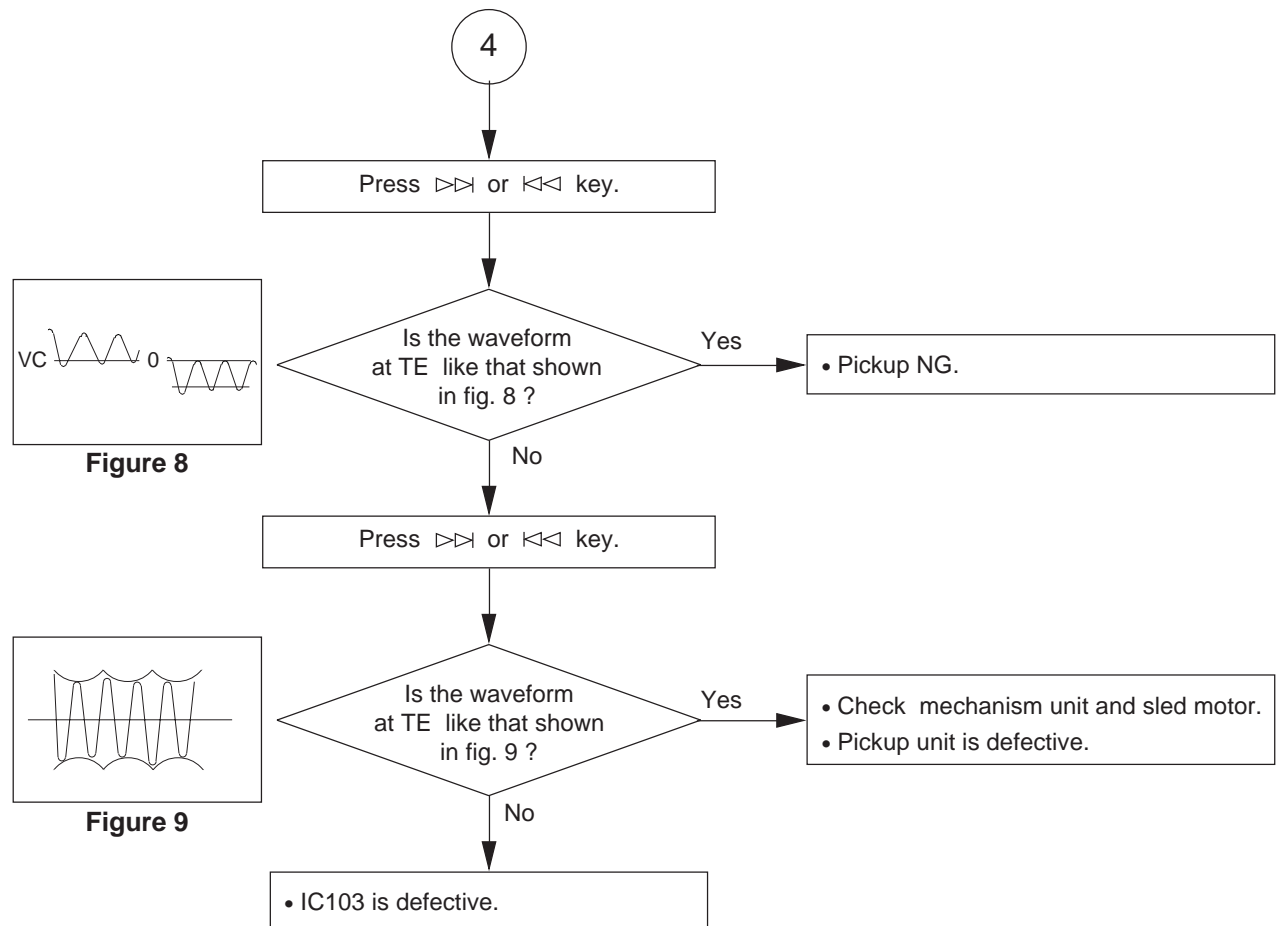

Repair Item 5: No audio signal output.

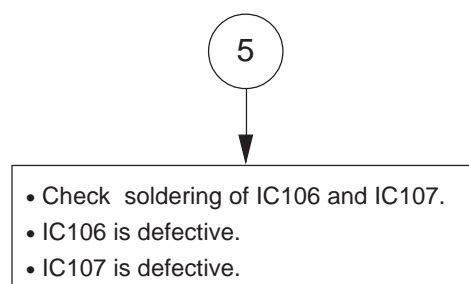

CD AMP PCB Top View

 


1




WIRING DIAGRAMS

AMP PCB

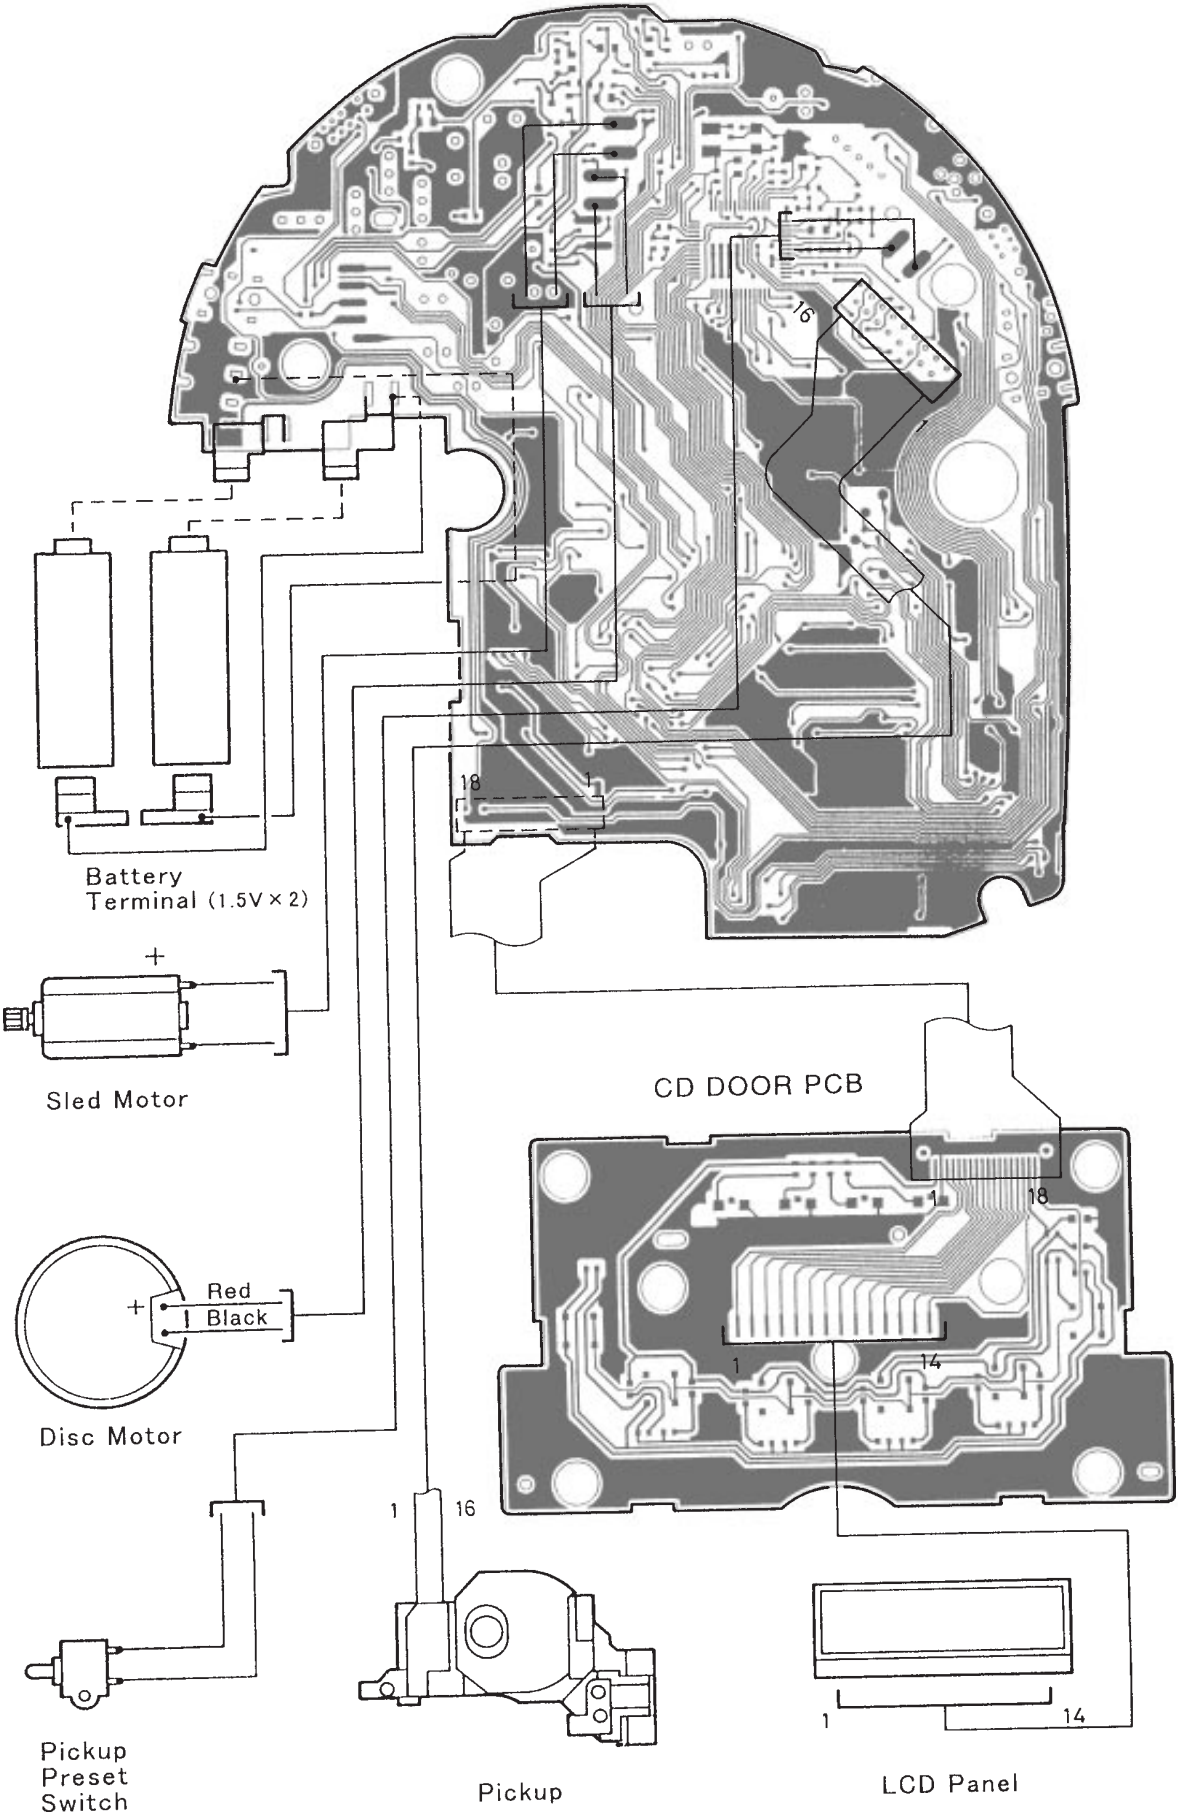


IC LEAD IDENTIFICATION AND INTERNAL DIAGRAMS



IC101: BA6894K

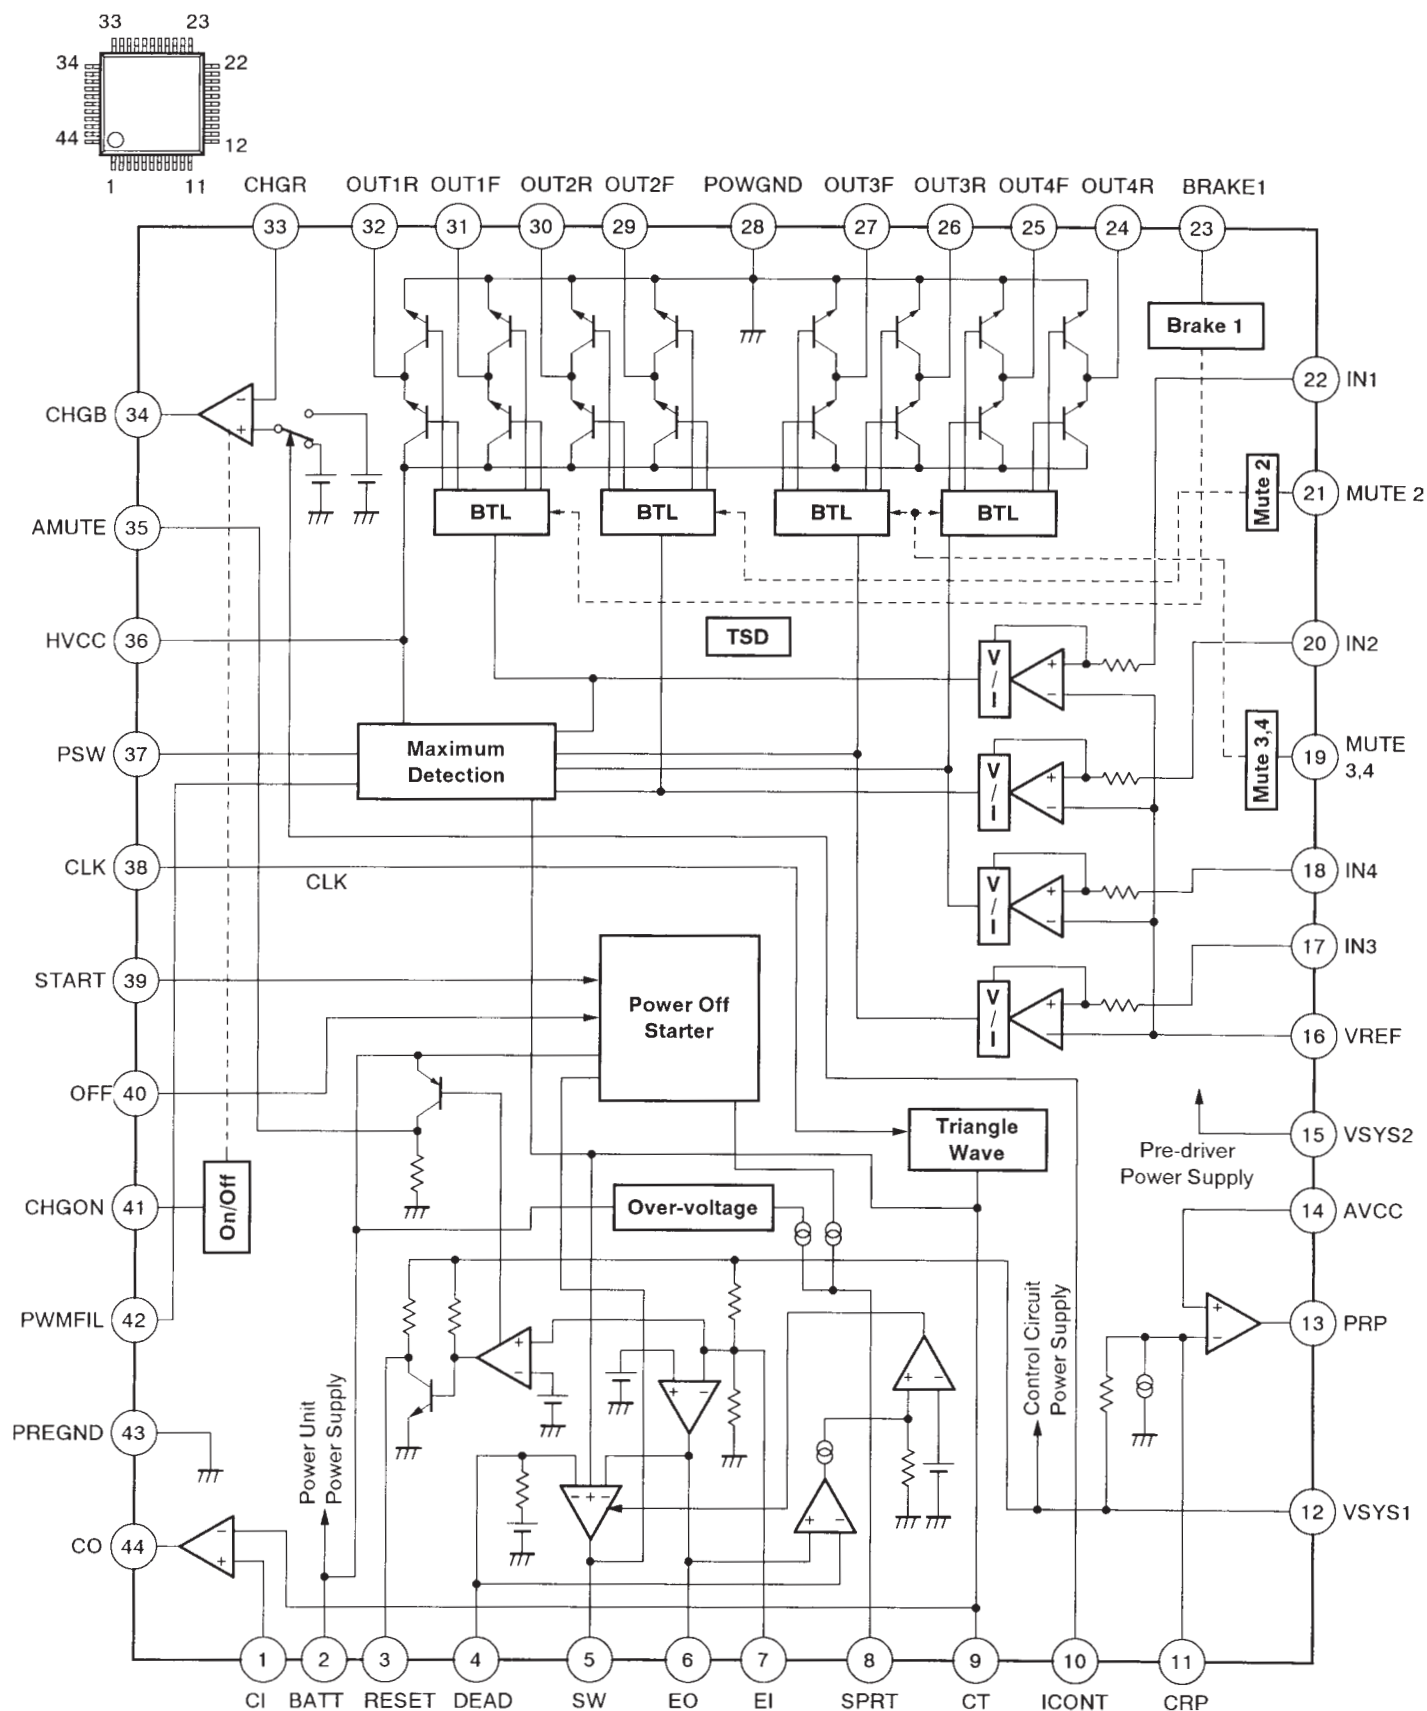


IC102: CXA1992AR

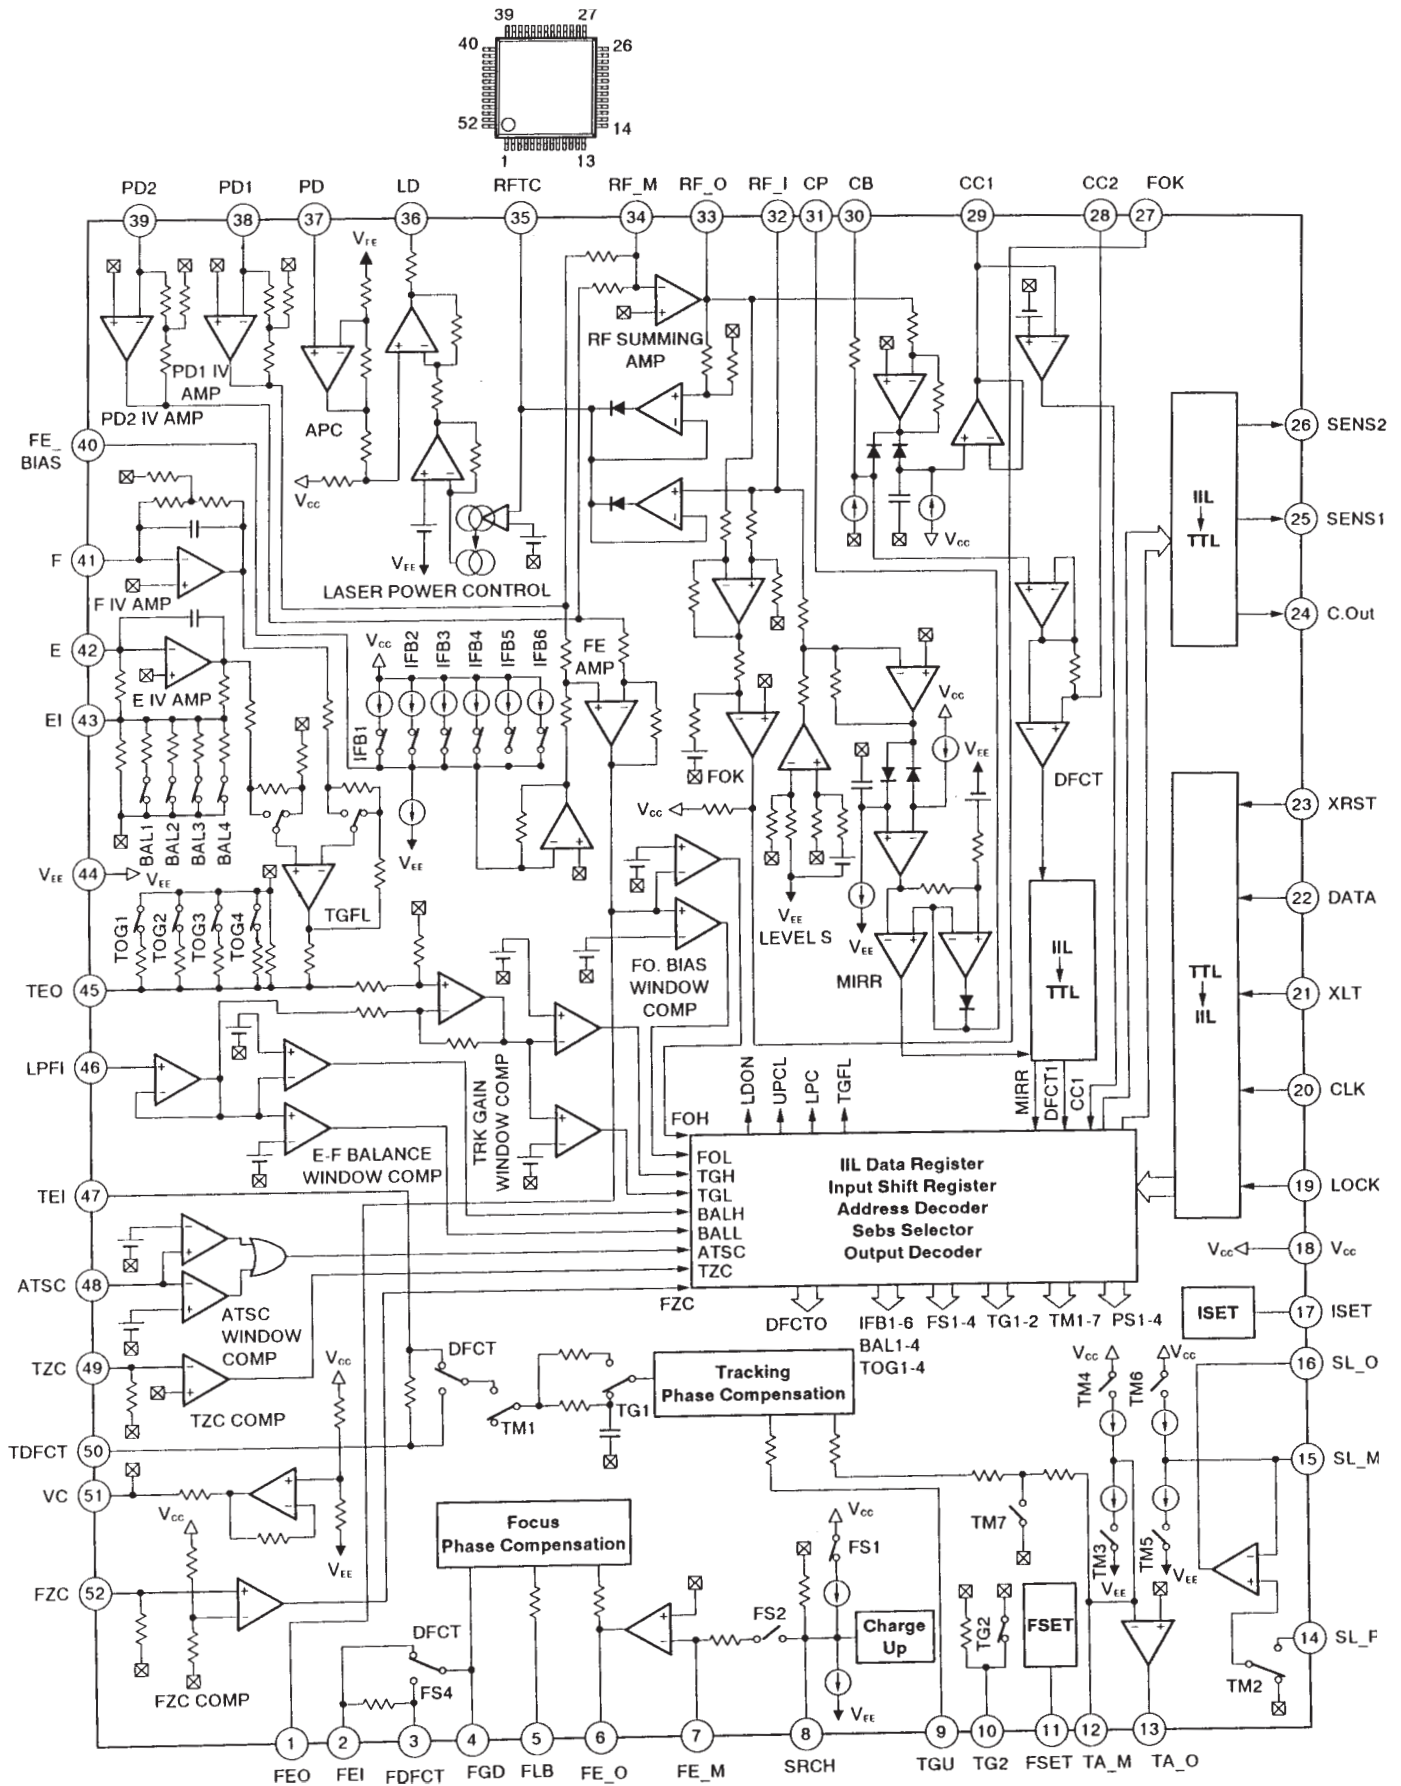



IC103: CXD2589Q

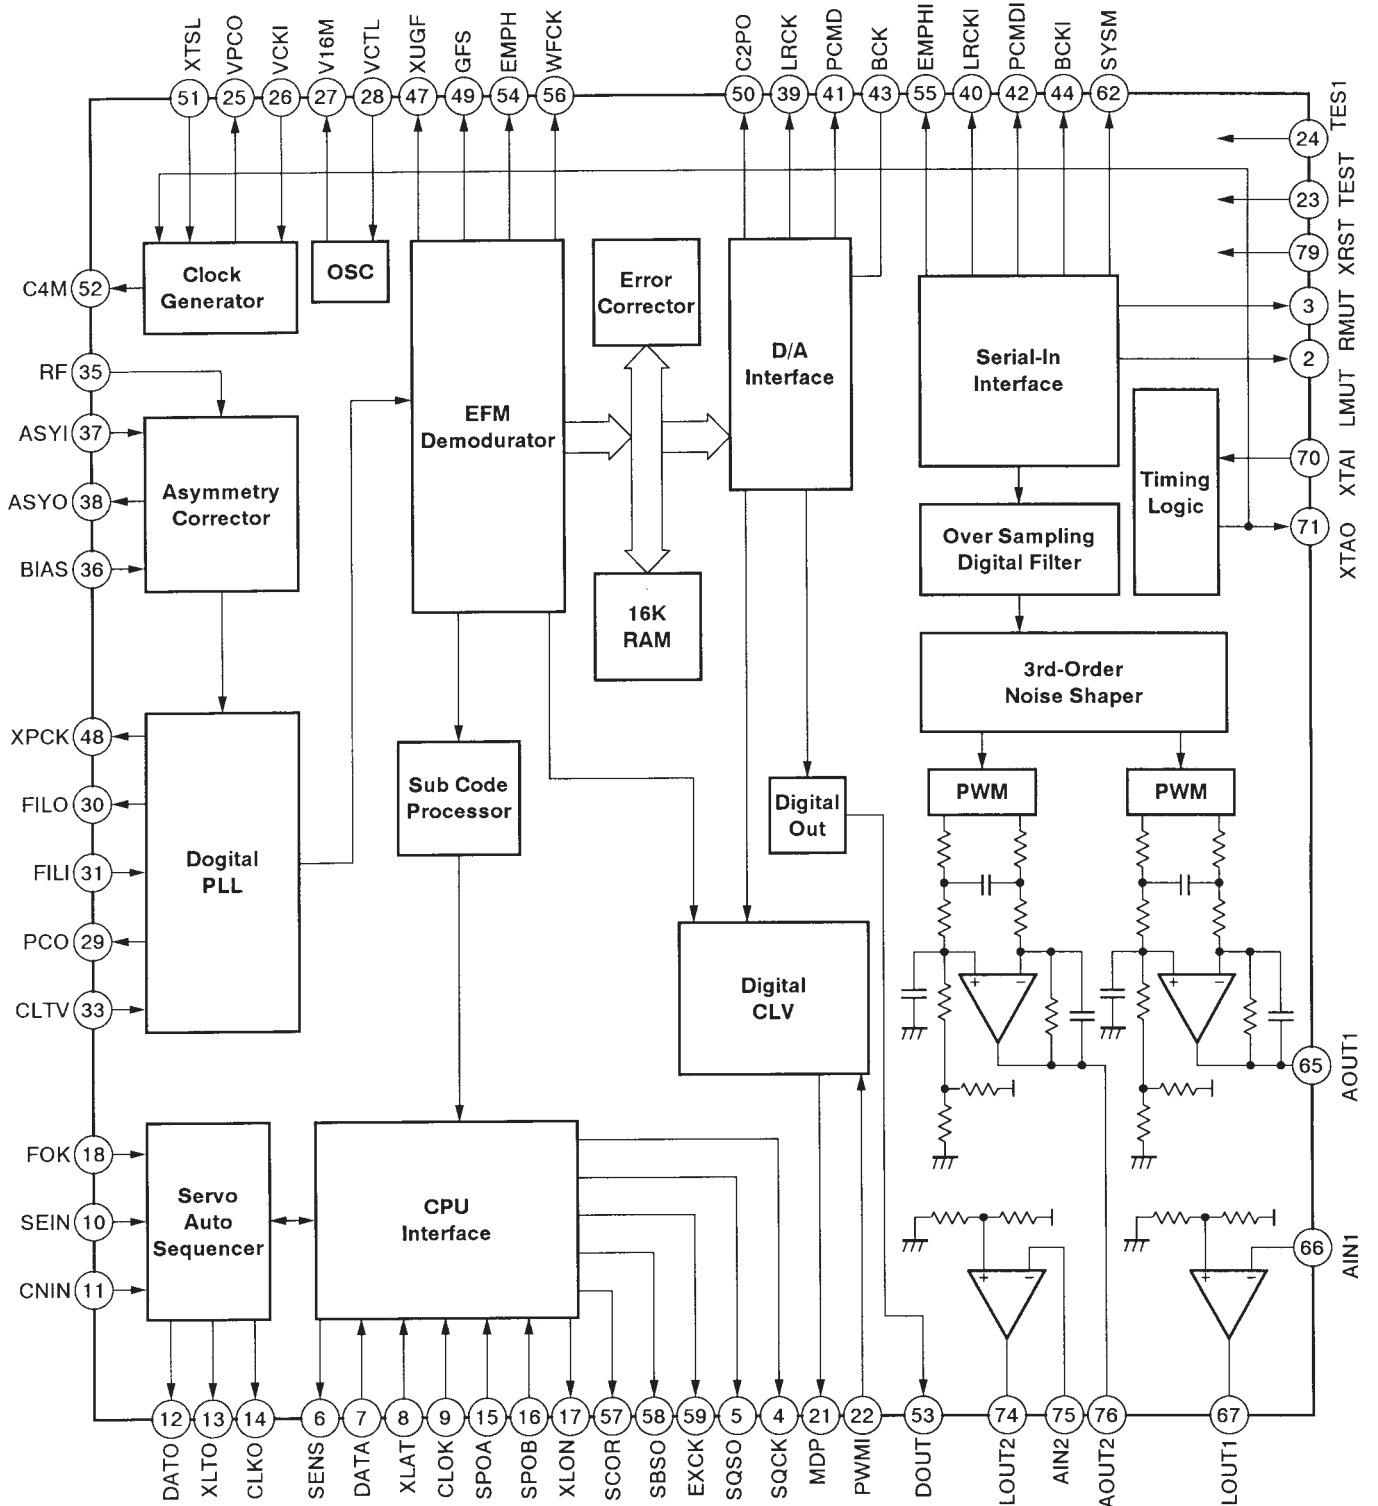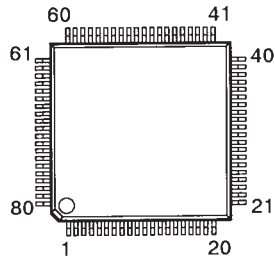


IC104: CXP83416-127R

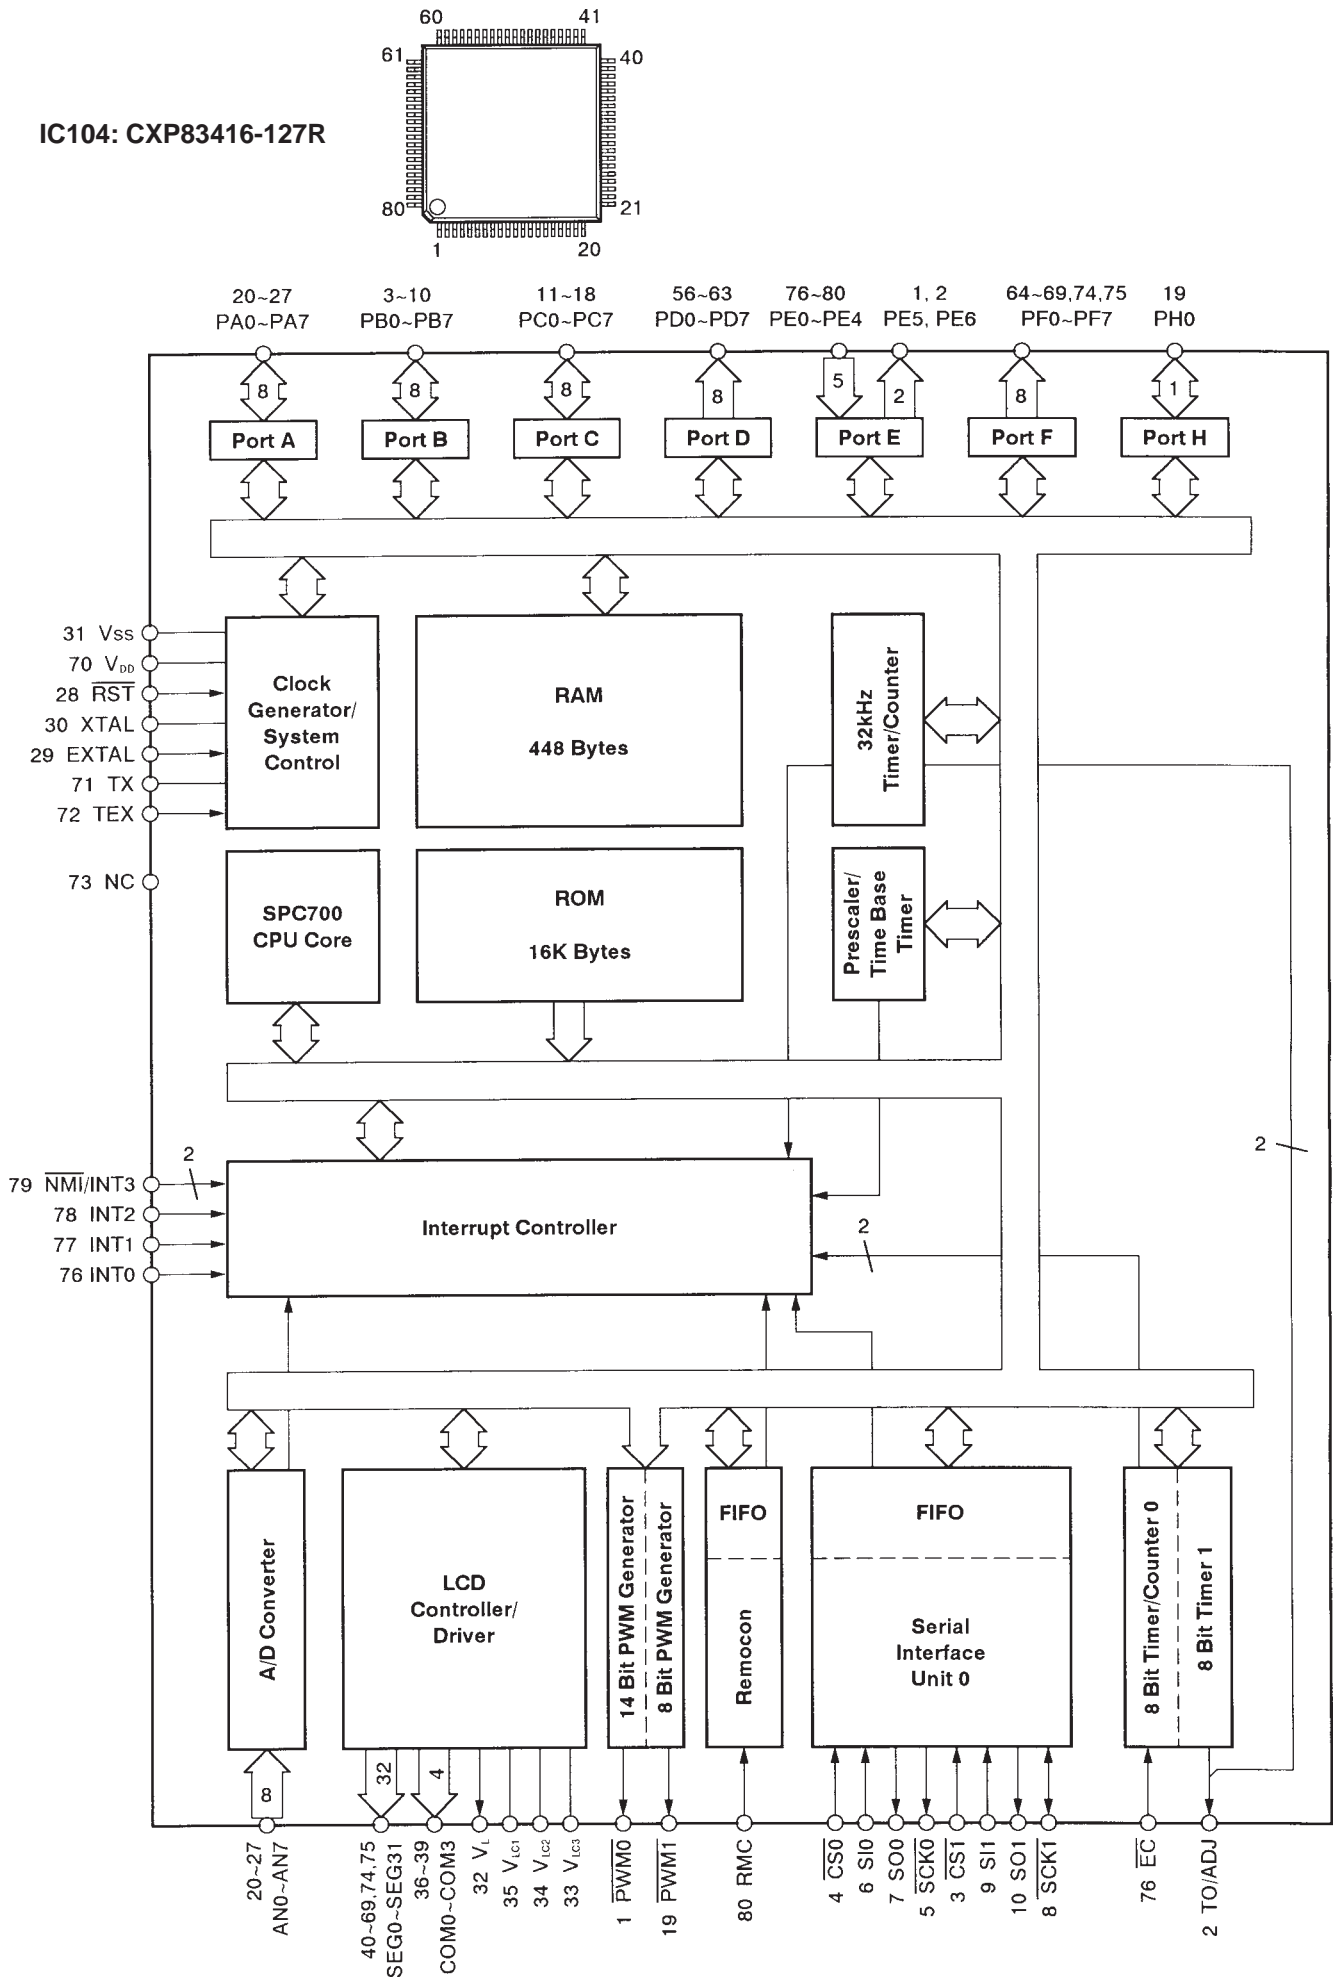



IC106: SM5859AF-TF

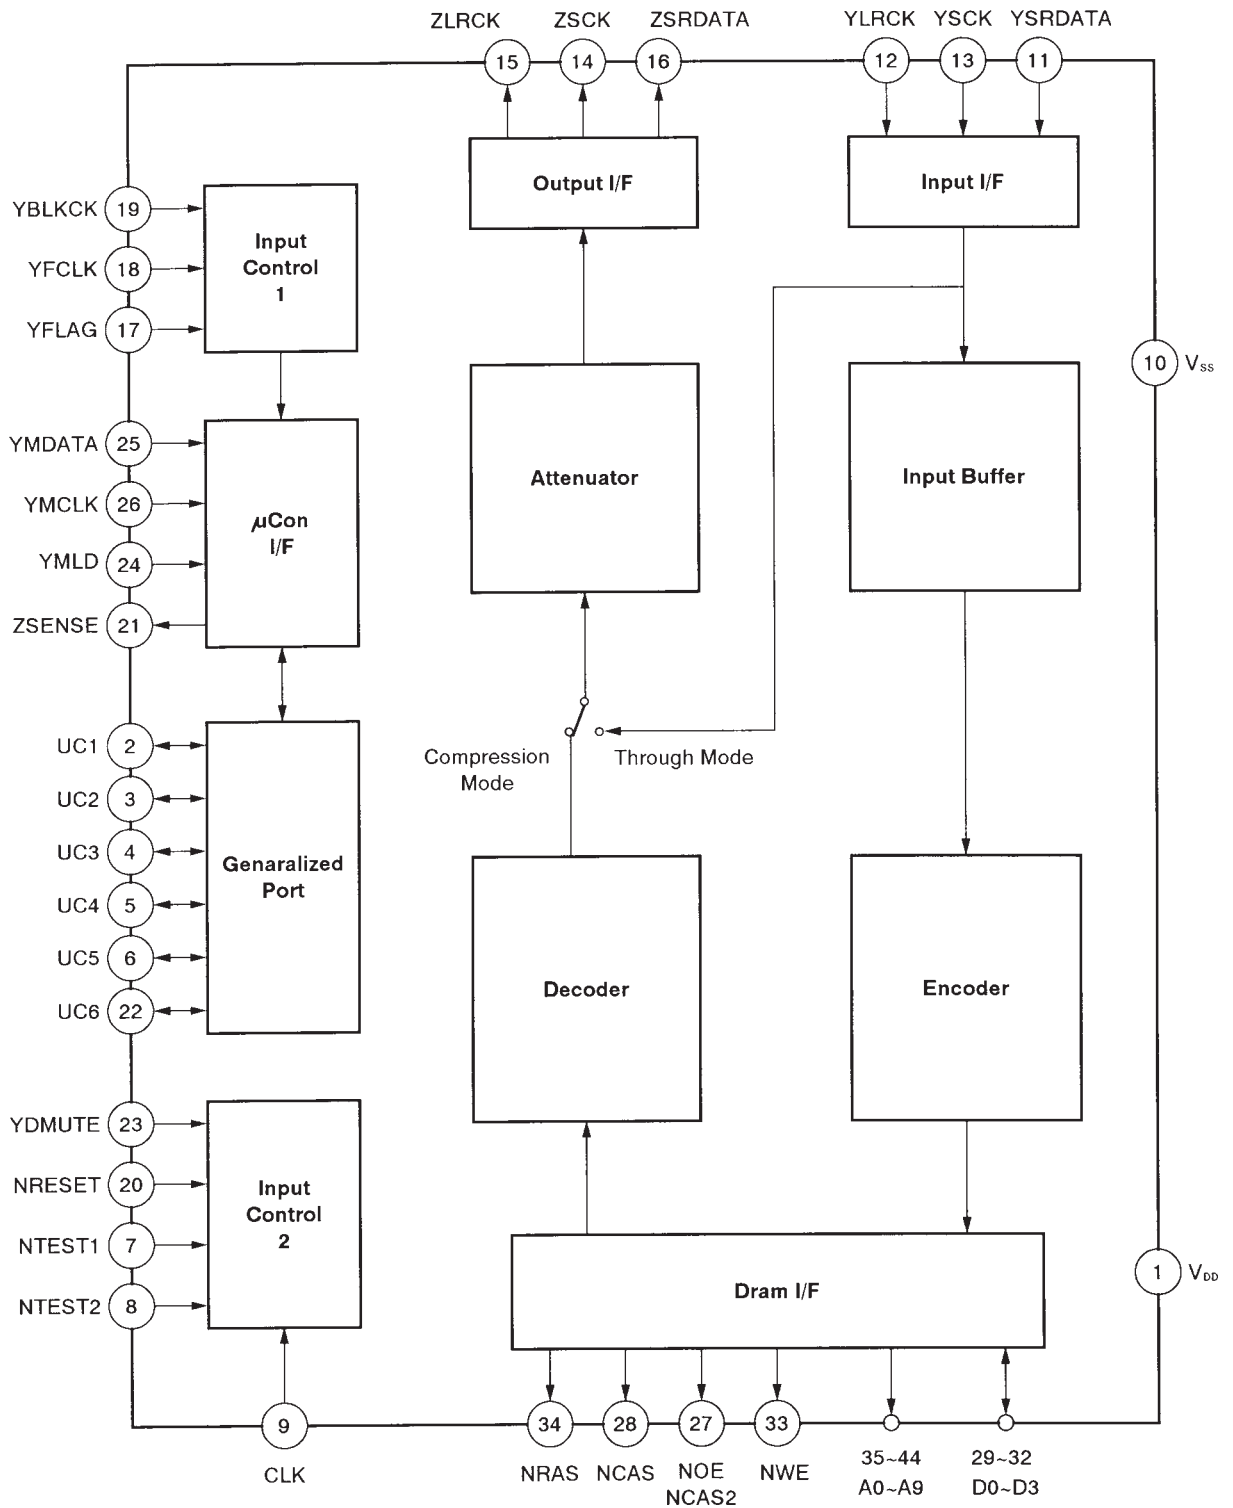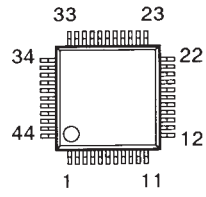



IC107: KM44V1004CJ-6

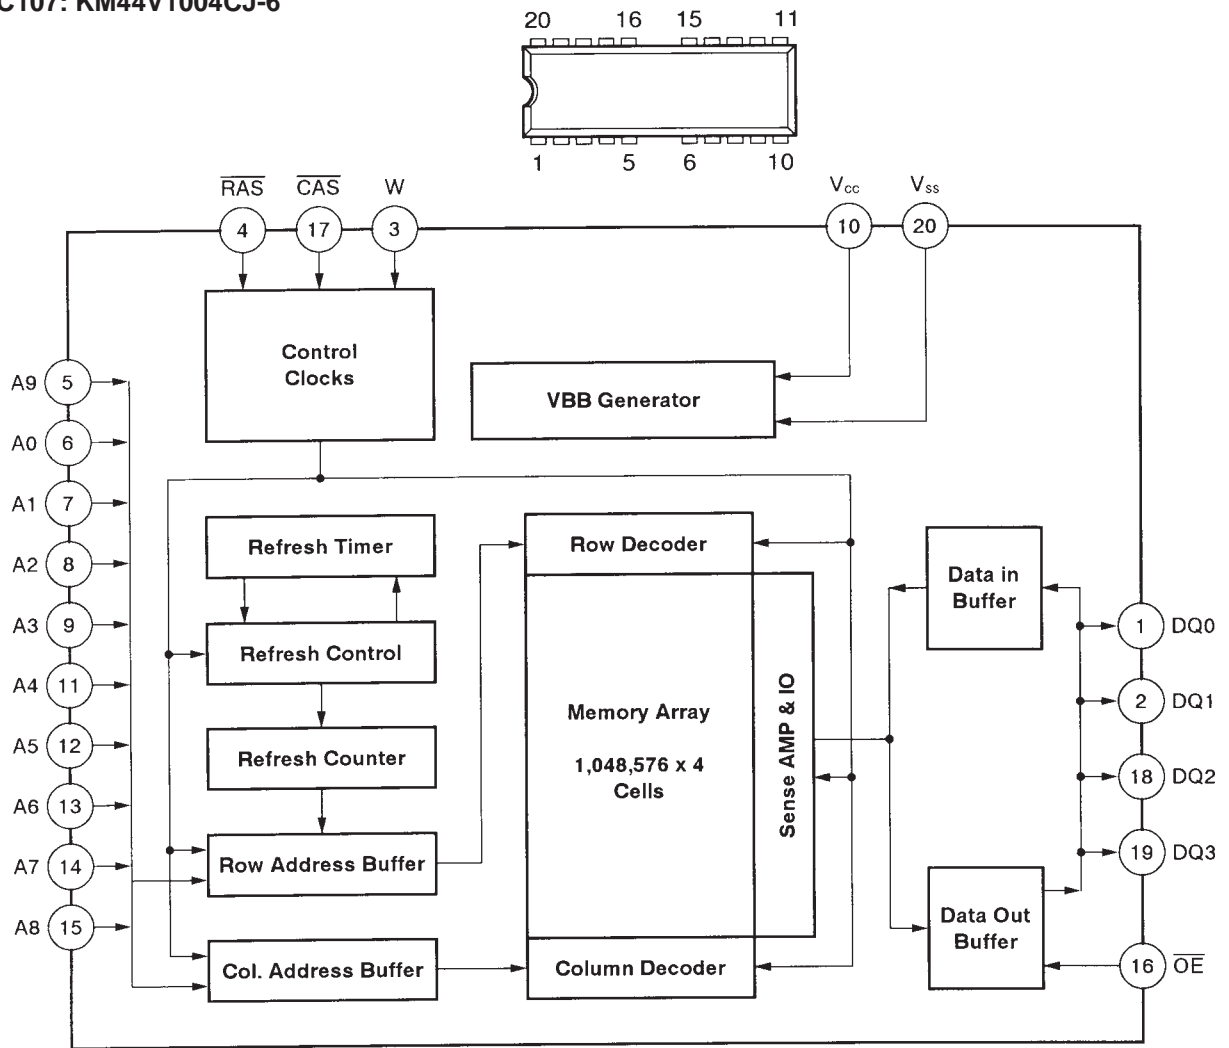

IC108: BA3574BFS

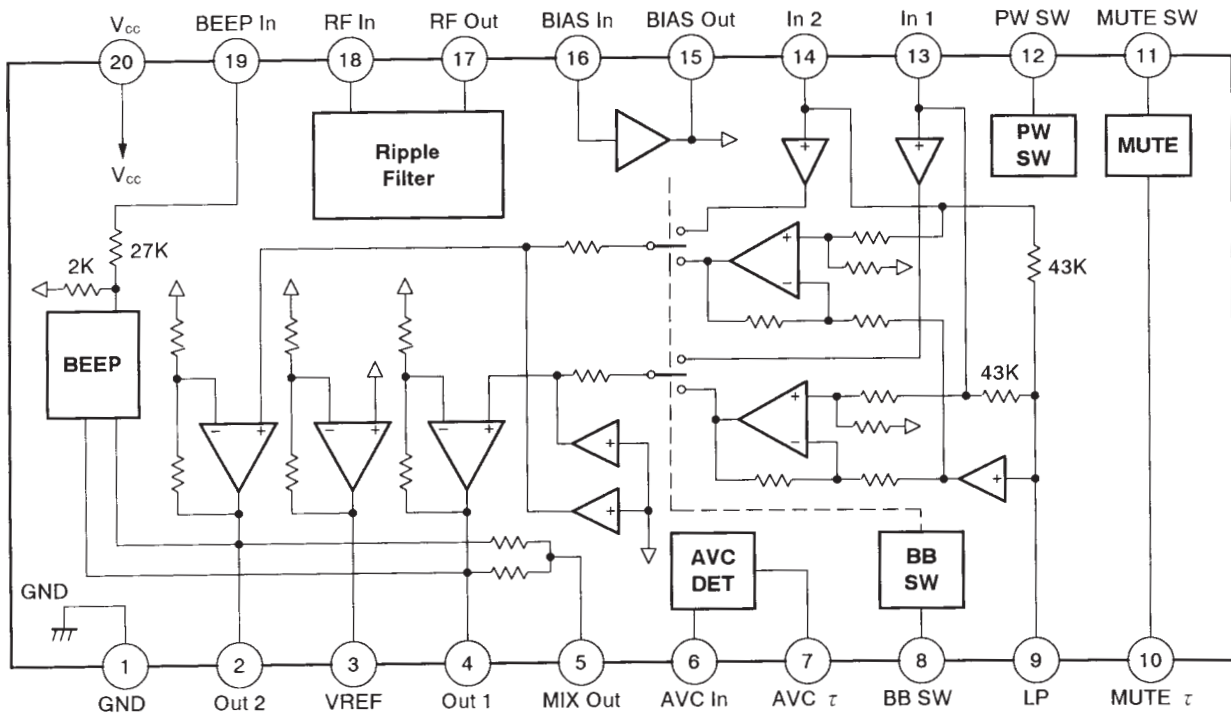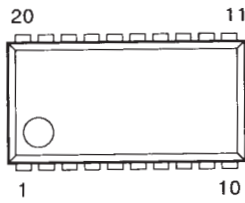


IC109, IC110: NJM3414AM-TE2

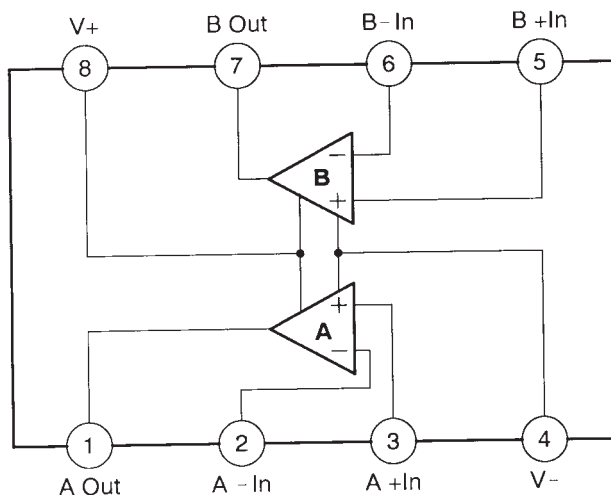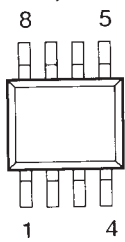


SCHEMATIC DIAGRAMS


CD Amplifier

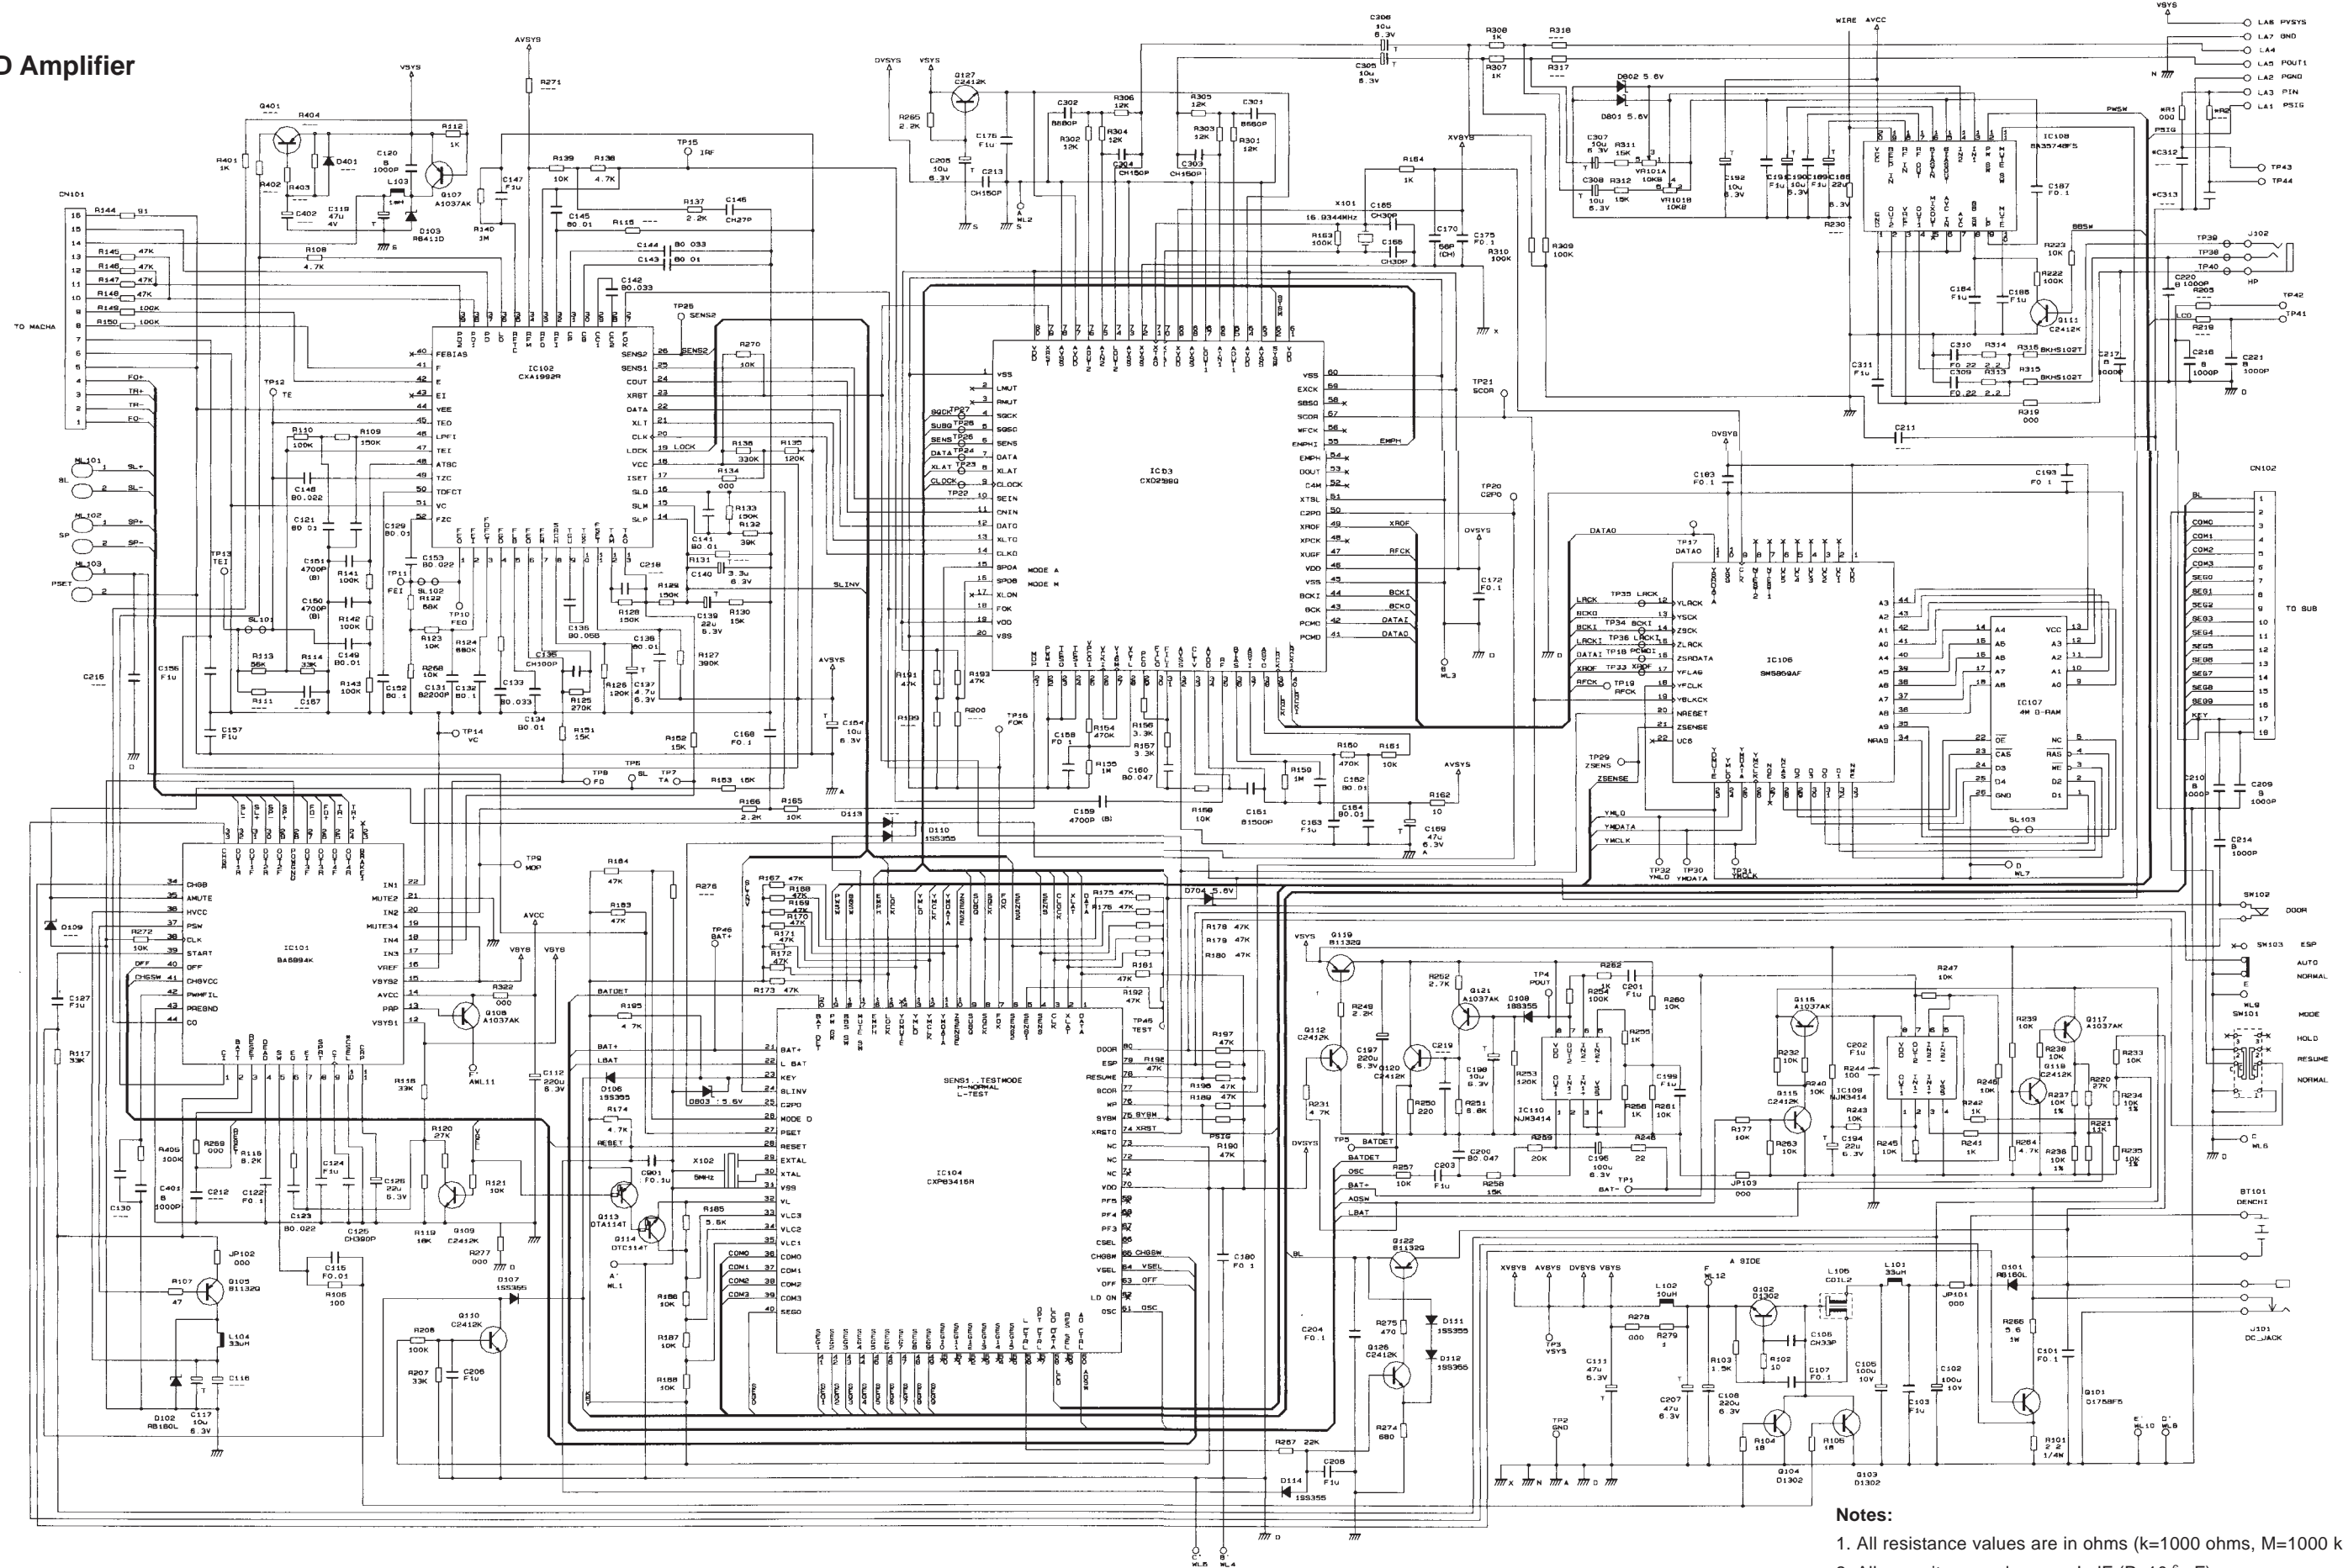

Pick-up

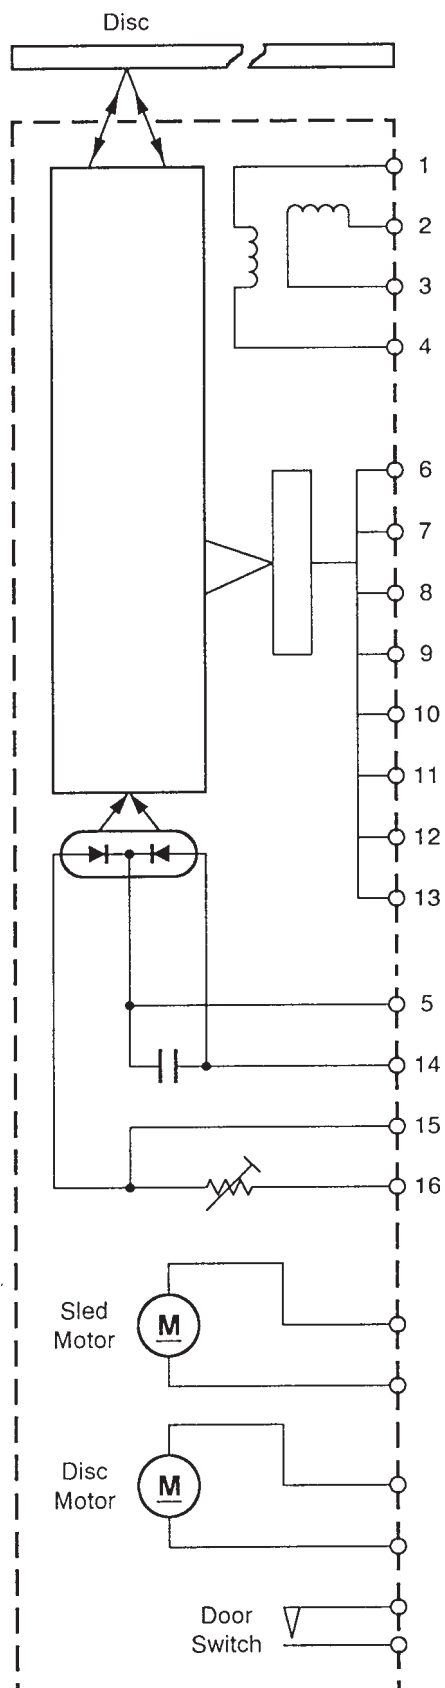

CD Door

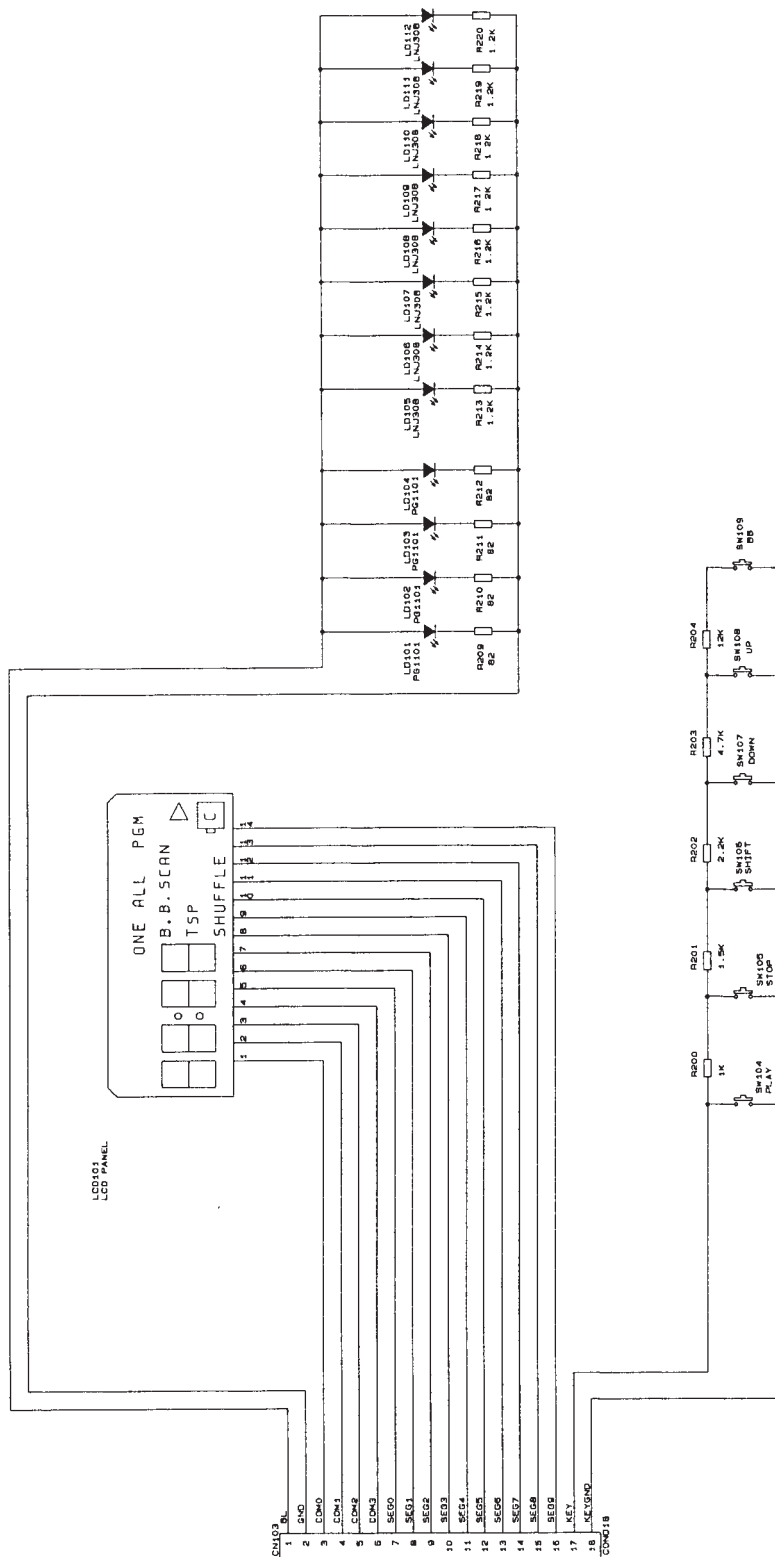

PARTS LIST

PZ-3100

- Notes:
1. Prices and specifications are subject to change without pointer notice.
 2. As for spare parts order and supply, refer to the “GUIDEBOOK for Spare parts Supply”, published separately.
 3. The numbers in item column correspond to the same numbers in drawing.

N	Item	Code No.	Parts Name	Specification	Q'ty	R	Remark
---	------	----------	------------	---------------	------	---	--------

ELECTRICAL PARTS

DIODES							
N	D101	1909 7217	Diode	0915-512-8-00	2	C	PZ-3100 Common
	D102	1909 7217	Diode	0915-512-8-00	2	C	PZ-3100 Common
	D103	1915 7022	Diode	0915-523-4-00	1	C	PZ-3100 Common
	D106	1909 5846	Diode	0915-508-3-00	1	C	PZ-3100 Common
	D107	1909 5846	Diode	0915-508-3-00	1	C	PZ-3100 Common
	D108	1909 5846	Diode	0915-508-3-00	1	C	PZ-3100 Common
	D110	1909 5846	Diode	0915-508-3-00	1	C	PZ-3100 Common
	D111	1909 5846	Diode	0915-508-3-00	1	C	PZ-3100 Common
	D112	1909 5846	Diode	0915-508-3-00	1	C	PZ-3100 Common
	D114	1909 5846	Diode	0915-508-3-00	1	C	PZ-3100 Common
	D801	1915 7023	Diode	0915-518-9-00	1	C	PZ-3100 Common
	D802	1915 7023	Diode	0915-518-9-00	1	C	PZ-3100 Common
	D803	1915 7023	Diode	0915-518-9-00	1	C	PZ-3100 Common
IC's							
	IC101	1915 0140	IC	0911-204-0-00	1	A	PZ-3100 Common
	IC102	1915 0141	IC	0911-203-9-00	1	A	PZ-3100 Common
	IC103	1915 0142	IC	0911-203-8-00	1	A	PZ-3100 Common
	IC104	1915 0143	IC	0037-405-0-00	1	A	PZ-3100 Common
	IC106	1915 0144	IC	0911-842-3-00	1	A	PZ-3100 Common
	IC107	1915 0145	IC	0911-839-4-00	1	A	PZ-3100 Common
	IC108	1915 0146	IC	0911-204-1-00	1	A	PZ-3100 Common
	IC109	1915 0147	IC	0911-842-2-00	1	A	PZ-3100 Common
	IC110	1915 0147	IC	0911-842-2-00	1	A	PZ-3100 Common
JACK							
	J101	3502 0003	Jack	0033-672-0-0013	1	B	PZ-3100 Common
	J102	1909 5601	Jack	0033-485-0-01	1	B	PZ-3100 Common
COIL							
	L101	1909 9829	Inductor	0990-553-3-06	1	C	PZ-3100 Common
	L102	3013 1197	Inductor	0990-591-0-05	1	C	PZ-3100 Common
	L103	1915 0148	Inductor	0990-561-0-25	1	C	PZ-3100 Common
	L104	1909 9829	Inductor	0990-553-3-06	1	C	PZ-3100 Common
	L105	1909 9830	Inductor	0990-869-5-05	1	C	PZ-3100 Common
LCD PANEL							
N	LC101	1915 7024	LCD	0040-423-0-0013	1	C	PZ-3100 Common
TRANSISTOR							
	Q101	2253 0709	Transistor	2SD1758TLQ	1	B	PZ-3100 Common
	Q102	1909 9831	Transistor	0906-201-2-20	1	B	PZ-3100 Common
	Q103	1909 9831	Transistor	0906-201-2-20	1	B	PZ-3100 Common
	Q104	1909 9831	Transistor	0906-201-2-20	1	B	PZ-3100 Common
	Q105	1909 6532	Transistor	0906-512-0-17	1	B	PZ-3100 Common
	Q107	1909 5849	Transistor	0906-505-2-19	1	B	PZ-3100 Common
	Q108	1909 5849	Transistor	0906-505-2-19	1	B	PZ-3100 Common
	Q109	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common
	Q110	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common
	Q111	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common
	Q112	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common
	Q113	1909 5851	Transistor	0906-502-0-00	1	B	PZ-3100 Common
	Q114	1909 5850	Transistor	0906-502-5-00	1	B	PZ-3100 Common
	Q115	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common
	Q116	1909 5849	Transistor	0906-505-2-19	1	B	PZ-3100 Common
	Q117	1909 5849	Transistor	0906-505-2-19	1	B	PZ-3100 Common
	Q118	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common
	Q119	1909 6532	Transistor	0906-512-0-17	1	B	PZ-3100 Common
	Q120	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common
	Q121	1909 5849	Transistor	0906-505-2-19	1	B	PZ-3100 Common
	Q122	1909 6532	Transistor	0906-512-0-17	1	B	PZ-3100 Common
	Q126	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common
	Q127	1909 3809	Transistor	0906-500-9-18	1	B	PZ-3100 Common

Note : N - New parts

M - Minimum order/supply quantity

R - Rank

N	Item	Code No.	Parts Name	Specification	Q'ty	R	Remark
SWITCHES							
	SW101	1915 0138	Switch / slide	0028-434-0-0013	1	C	PZ-3100 Common
	SW102	1909 8266	Switch / push	0028-060-0-00	1	C	PZ-3100 Common
	SW103	1909 8267	Switch / slide	0028-398-0-00	1	C	PZ-3100 Common
	SW104	1915 0139	Switch / TP-tact	0028-667-0-0001	1	C	PZ-3100 Common
	SW105	1915 0139	Switch / TP-tact	0028-667-0-0001	1	C	PZ-3100 Common
	SW106	1915 0139	Switch / TP-tact	0028-667-0-0001	1	C	PZ-3100 Common
	SW107	1915 0139	Switch / TP-tact	0028-667-0-0001	1	C	PZ-3100 Common
	SW108	1915 0139	Switch / TP-tact	0028-667-0-0001	1	C	PZ-3100 Common
	SW109	1915 0139	Switch / TP-tact	0028-667-0-0001	1	C	PZ-3100 Common
VARIABLE RESISTOR							
	VR101	1909 8272	Volume	0031-639-1-03	1	C	PZ-3100 Common
OSCILLATOR							
	X101	1915 0152	Resonator / ceramic	0038-999-0-00	1	C	PZ-3100 Common
	X102	1915 0153	Resonator / ceramic	0038-800-0-00	1	C	PZ-3100 Common

MECHANICAL PARTS

N	1	1915 7027	Panel / display	2564-806-0-02	1	X	PZ-3100 Common
N	2	1915 7028	Adhesive tape	2564-880-0-00	1	X	PZ-3100 Common
N	3	1915 7026	Door / CD	2564-805-0-02	1	X	PZ-3100 Common
N	4	1915 7039	Knob A / tact	2564-860-0-01	1	X	PZ-3100 Common
N	5	1915 7040	Knob B / tact	2564-861-0-02	1	X	PZ-3100 Common
N	6	1915 7041	Knob C / tact	2564-862-0-02	1	X	PZ-3100 Common
N	7	1915 7042	Knob D / tact	2564-863-0-02	1	X	PZ-3100 Common
N	8	1915 7043	Knob E / tact	2564-864-0-02	1	X	PZ-3100 Common
N	9	1915 7044	Knob F / tact	2564-865-0-01	1	X	PZ-3100 Common
N	10	1915 7045	Case / upper	2566-801-0-03	1	X	PZ-3100 Common
N	11	1915 7030	Knob / door open	2569-863-0-02	1	X	PZ-3100 Common
N	12	1915 7031	Knob / door hold	2569-271-0-00	1	X	PZ-3100 Common
	13	1915 0110	Mecha unit / CD	2597-050-0-00	1	C	PZ-3100 Common
N	14	1915 7035	PCB unit / display	2571-005-0-00	1	X	PZ-3100 Common
N	14-1	1915 7036	Interconnector	2564-560-0-00	1	X	PZ-3100 Common
N	14-2	1915 7037	FPC / display PCB	2569-550-0-91	1	X	PZ-3100 Common
N	15	1915 7032	AMP unit / CD	2571-001-0-00	1	C	PZ-3100 Common
N	15-1	1915 7033	Spring B / battery	2569-181-1-00	1	X	PZ-3100 Common
N	15-2	1915 7034	Spring C / battery	2569-182-1-00	1	X	PZ-3100 Common
	16	1915 0166	Spring A1/ battery	2569-184-1-00	1	X	PZ-3100 Common
	17	1915 0167	Spring A2/ battery	2569-185-1-00	1	X	PZ-3100 Common
N	18	1915 7046	Case / lower	2566-803-0-02	1	X	PZ-3100 Common
N	19	1915 7029	Cover / battery	2569-807-0-02	1	C	PZ-3100 Common
	20	1909 6649	Label / FCC caution	0074-235-0-00	1	X	for USA
	20	1909 2652	Label / caution	0074-227-0-00	1	X	for EU
N	21	1915 7038	Label / rear	2511-850-0-87	1	X	for USA
N	21	1915 7025	Label / rear	2511-850-0-92	1	X	for EU
	22	1915 0164	Label / identification	2540-850-0-02	1	X	for USA
	22	1909 2654	Label / warning	0074-225-0-00	1	X	for EU
CD MECHANISM							
	13	1915 0110	Mecha unit / CD	2597-050-0-00	1	C	PZ-3100 Common
	13-1	1915 0171	Pick up / laser	0020-015-0-0001	1	C	PZ-3100 Common
	13-2	1909 8278	Switch / micro	0036-819-0-00	1	X	PZ-3100 Common
	13-3	1915 0172	Motor / CD slide	0022-107-0-0013	1	X	PZ-3100 Common
	13-4	1909 6238	Gear / motor	1497-255-1-00	1	X	PZ-3100 Common
	13-5	1915 0174	Gear A	2597-256-0-00	1	X	PZ-3100 Common
	13-6	1915 0175	Gear B	2597-257-0-00	1	X	PZ-3100 Common
	13-7	1915 0173	Motor / CD drive	0022-093-0-00	1	X	PZ-3100 Common
ACCESSORY							
		1915 0176	Headphone	0025-072-0-0321	1	X	for USA
		1910 0296	Innerphone	0025-535-0-0112	1	X	for EU
		1910 0178	Adapter / AD-DC	0027-195-0-0113	1	X	for EU

Note : N - New parts

M - Minimum order/supply quantity

R - Rank

Capacitors and resistors can not be supplied, because they will be available in your country.

CAPACITOR

Item	Specification			Qty
	C: Chip type			
C101	Ceramic, C	25V 0.1 µF +80/-20%		1
C102	Electrolytic	10V 100 µF ±20%		1
C103	Ceramic, C	16V 1 µF +80/-20%		1
C105	Electrolytic	10V 100 µF ±20%		1
C106	Ceramic, C	50V 33 PF ±5%		1
C107	Ceramic, C	25V 0.1 µF +80/-20%		1
C108	Electrolytic	6.3V 220 µF ±20%		1
C111	Ceramic, C	6.3V 47 µF ±20%		1
C112	Electrolytic	6.3V 220 µF ±20%		1
C115	Ceramic, C	50V 0.01 µF +80/-20%		1
C117	Ceramic, C	6.3V 10 µF ±20%		1
C119	Ceramic, C	4V 47 µF ±20%		1
C120	Ceramic, C	50V 1000 PF ±10%		1
C121	Ceramic, C	50V 0.01 µF ±10%		1
C122	Ceramic, C	25V 0.1 µF +80/-20%		1
C123	Ceramic, C	25V 0.022 µF ±10%		1
C124	Ceramic, C	16V 1 µF +80/-20%		1
C125	Ceramic, C	50V 390 PF ±5%		1
C126	Electrolytic	6.3V 22 µF ±20%		1
C127	Ceramic, C	16V 1 µF +80/-20%		1
C129	Ceramic, C	50V 0.01 µF ±10%		1
C131	Ceramic, C	50V 2200 PF ±10%		1
C132	Ceramic, C	25V 0.1 µF ±10%		1
C133	Ceramic, C	16V 0.033 µF ±10%		1
C134	Ceramic, C	50V 0.01 µF ±10%		1
C135	Ceramic, C	50V 100 PF ±5%		1
C136	Ceramic, C	25V 0.056 µF ±10%		1
C137	Ceramic, C	6.3V 4.7 µF ±20%		1
C138	Ceramic, C	50V 0.01 µF ±10%		1
C139	Ceramic, C	6.3V 22 µF ±20%		1
C140	Ceramic, C	6.3V 3.3 µF ±20%		1
C141	Ceramic, C	50V 0.01 µF ±10%		1
C142	Ceramic, C	16V 0.033 µF ±10%		1
C143	Ceramic, C	50V 0.01 µF ±10%		1
C144	Ceramic, C	16V 0.033 µF ±10%		1
C145	Ceramic, C	50V 0.01 µF ±10%		1
C146	Ceramic, C	50V 27 PF ±5%		1
C147	Ceramic, C	16V 1 µF +80/-20%		1
C148	Ceramic, C	25V 0.022 µF ±10%		1
C149	Ceramic, C	50V 0.01 µF ±10%		1
C150	Ceramic, C	50V 4700 PF ±10%		1
C151	Ceramic, C	50V 4700 PF ±10%		1
C152	Ceramic, C	25V 0.1 µF ±10%		1
C153	Ceramic, C	25V 0.022 µF ±10%		1
C154	Ceramic, C	6.3V 10 µF ±20%		1
C156	Ceramic, C	16V 1 µF +80/-20%		1
C157	Ceramic, C	16V 1 µF +80/-20%		1
C158	Ceramic, C	25V 0.1 µF +80/-20%		1
C159	Ceramic, C	50V 4700 µF ±10%		1
C160	Ceramic, C	16V 0.047 µF ±10%		1
C161	Ceramic, C	50V 1500 PF ±10%		1
C162	Ceramic, C	50V 0.01 µF ±10%		1
C163	Ceramic, C	16V 1 µF +80/-20%		1
C164	Ceramic, C	50V 0.01 µF ±10%		1
C165	Ceramic, C	50V 30 PF ±5%		1

Item	Specification				Qty
C166	Ceramic, C	50V 30 PF ±5%			1
C168	Ceramic, C	25V 0.1 µF +80/-20%			1
C169	Ceramic, C	6.3V 47 µF ±20%			1
C170	Ceramic, C	50V 56 PF ±5%			1
C172	Ceramic, C	25V 0.1 µF +80/-20%			1
C175	Ceramic, C	25V 0.1 µF +80/-20%			1
C176	Ceramic, C	16V 1 µF +80/-20%			1
C180	Ceramic, C	25V 0.1 µF +80/-20%			1
C183	Ceramic, C	25V 0.1 µF +80/-20%			1
C184	Ceramic, C	16V 1 µF +80/-20%			1
C186	Ceramic, C	16V 1 µF +80/-20%			1
C187	Ceramic, C	25V 0.1 µF +80/-20%			1
C188	Ceramic, C	6.3V 22 µF ±20%			1
C189	Ceramic, C	16V 1 µF +80/-20%			1
C190	Ceramic, C	6.3V 10 µF ±20%			1
C191	Ceramic, C	16V 1 µF +80/-20%			1
C192	Ceramic, C	6.3V 10 µF ±20%			1
C193	Ceramic, C	25V 0.1 µF +80/-20%			1
C194	Ceramic, C	6.3V 22 µF ±20%			1
C195	Electrolytic	6.3V 100 µF ±20%			1
C197	Electrolytic	6.3V 220 µF ±20%			1
C198	Ceramic, C	6.3V 10 µF ±20%			1
C199	Ceramic, C	16V 1 µF +80/-20%			1
C200	Ceramic, C	16V 0.047 µF ±10%			1
C201	Ceramic, C	16V 1 µF +80/-20%			1
C202	Ceramic, C	16V 1 µF +80/-20%			1
C203	Ceramic, C	16V 1 µF +80/-20%			1
C204	Ceramic, C	25V 0.047 µF +80/-20%			1
C205	Ceramic, C	6.3V 10 µF ±20%			1
C206	Ceramic, C	16V 1 µF +80/-20%			1
C207	Ceramic, C	6.3V 47 µF ±20%			1
C208	Ceramic, C	16V 47 µF +80/-20%			1
C209	Ceramic, C	50V 1000 PF ±10%			1
C210	Ceramic, C	50V 1000 PF ±10%			1
C213	Ceramic, C	50V 150 PF ±5%			1
C214	Ceramic, C	50V 1000 PF ±10%			1
C216	Ceramic, C	50V 1000 PF ±10%			1
C217	Ceramic, C	50V 1000 PF ±10%			1
C220	Ceramic, C	50V 1000 PF ±10%			1
C221	Ceramic, C	50V 1000 PF ±10%			1
C301	Ceramic, C	50V 680 PF ±10%			1
C302	Ceramic, C	50V 680 PF ±10%			1
C303	Ceramic, C	50V 150 PF ±5%			1
C304	Ceramic, C	50V 150 PF ±5%			1
C305	Ceramic, C	6.3V 10 µF ±20%			1
C306	Ceramic, C	6.3V 10 µF ±20%			1
C307	Ceramic, C	6.3V 10 µF ±20%			1
C308	Ceramic, C	6.3V 10 µF ±20%			1
C309	Ceramic, C	25V 0.22 µF +80/-20%			1
C310	Ceramic, C	25V 0.22 µF +80/-20%			1
C311	Ceramic, C	16V 1 µF +80/-20%			1
C401	Ceramic, C	50V 1000 PF ±10%			1
C901	Ceramic	50V 0.1 µF +80/-20%			1

RESISTOR


All resistors are chip type, 1/16watts, $\pm 5\%$ unless otherwise specified.

Item	Specification	Qty	Item	Specification	Qty
R101	2.2 Ω 1/8W	1	R160	470K Ω	1
R102	10 Ω	1	R161	10K Ω	1
R103	1.5K Ω	1	R162	10 Ω	1
R104	18 Ω	1	R163	100K Ω	1
R105	18 Ω	1	R164	1K Ω	1
R106	100 Ω	1	R165	10K Ω	1
R107	47 Ω	1	R166	2.2K Ω	1
R108	4.7K Ω	1	R167		
R109	150K Ω	1	~	47K Ω	7
R110	100K Ω	1	R173		
R112	1K Ω	1	R174	4.7K Ω	1
R113	56K Ω	1	R175	47K Ω	1
R114	33K Ω	1	R176	47K Ω	1
R116	8.2K Ω	1	R177	10K Ω	1
R117	33K Ω	1	R178		
R118	33K Ω	1	~	47K Ω	6
R119	18K Ω	1	R184		
R120	27K Ω	1	R185	5.6K Ω	1
R121	10K Ω	1	R186	10K Ω	1
R122	68K Ω	1	R187	10K Ω	1
R123	10K Ω	1	R188	10K Ω	1
R124	680K Ω	1	R189		
R125	270K Ω	1	~	47K Ω	5
R126	120K Ω	1	R193		
R127	390K Ω	1	R195	4.7K Ω	1
R128	150K Ω	1	R196	47K Ω	1
R129	150K Ω	1	R197	47K Ω	1
R130	15K Ω	1	R198	47K Ω	1
R132	39K Ω	1	R200	1K Ω	1
R133	150K Ω	1	R201	1.5K Ω	1
R134	0 Ω	1	R202	2.2K Ω	1
R135	120K Ω	1	R203	4.7K Ω	1
R136	330K Ω	1	R204	12K Ω	1
R137	2.2K Ω	1	R206	100K Ω	1
R138	4.7K Ω	1	R207	33K Ω	1
R139	10K Ω	1	R209		
R140	1M Ω	1	~	82 Ω	4
R141	100K Ω	1	R212		
R142	100K Ω	1	R213		
R143	100K Ω	1	~	1.2K Ω	7
R144	91 Ω	1	R219		
R145			R220	27K Ω	1
~	47K Ω	4	R221	11K Ω	1
R148			R222	100K Ω	1
R149	100K Ω	1	R223	10K Ω	1
R150	100K Ω	1	R231	4.7K Ω	1
R151	15K Ω	1	R232		
R152	15K Ω	1	~	10K Ω	10
R153	15K Ω	1	R240		
R154	470K Ω	1	R241	1K Ω	1
R155	1M Ω	1	R242	1K Ω	1
R156	3.3K Ω	1	R243	10K Ω	1
R157	3.3K Ω	1	R244	100 Ω	1
R158	10K Ω	1	R245	10K Ω	1
R159	1M Ω	1	R246	10K Ω	1


Item	Specification		Qty
R247	10K Ω		1
R248	22 Ω	1/10W	1
R249	2.2K Ω		1
R250	220 Ω		1
R251	6.8K Ω		1
R252	2.7K Ω		1
R253	120K Ω		1
R254	100K Ω		1
R255	1K Ω		1
R256	1K Ω		1
R157	10K Ω		1
R258	15K Ω		1
R259	20K Ω		1
R260	10K Ω		1
R261	10K Ω		1
R262	1K Ω		1
R263	10K Ω		1
R264	4.7K Ω		1
R265	2.2K Ω		1
R266	5.6 Ω	1W Metal Type	1
R267	22K Ω		1
R268	10K Ω		1
R269	0 Ω		1
R270	10K Ω		1
R272	10K Ω		1
R274	680 Ω		1
R275	470 Ω		1
R279	1 Ω		1
R301			
~	12K Ω		6
R306			
R307	1K Ω		1
R308	1K Ω		1
R309	100K Ω		1
R310	100K Ω		1
R311	15K Ω		1
R312	15K Ω		1
R313	2.2K Ω		1
R314	2.2K Ω		1
R315	1K Ω	EMI BEAD	1
R316	1K Ω	EMI BEAD	1
R322	0 Ω		1
R401	1K Ω		1
R405	100K Ω		1
JP101	0 Ω	1/8W	1
JP102	0 Ω	1/8W	1
JP103	0 Ω	1/10W	1
JP277	0 Ω	1/10W	1
JP278	0 Ω	1/10W	1
JP319	0 Ω	1/10W	1

EXPLODED VIEWS

Case

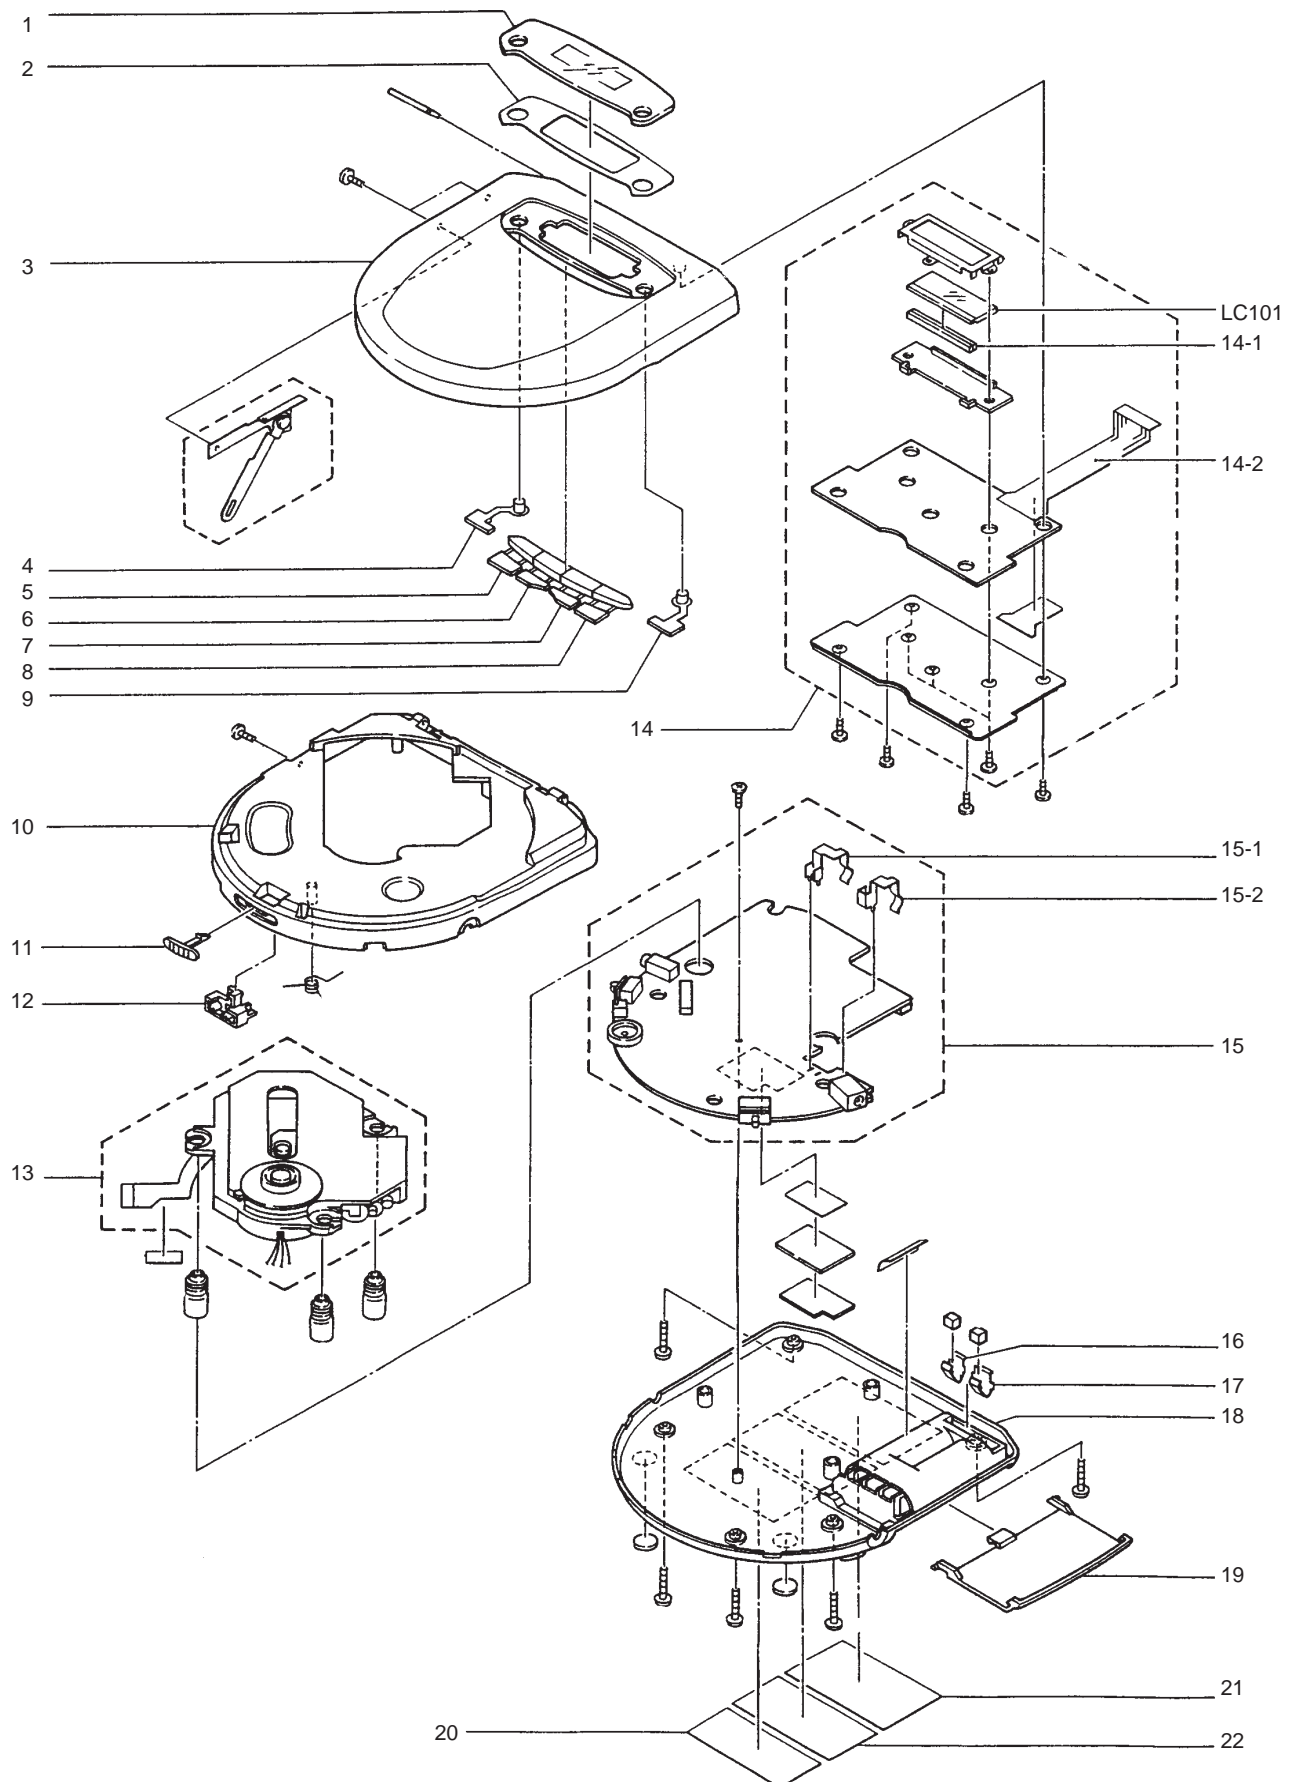

CD Mechanism

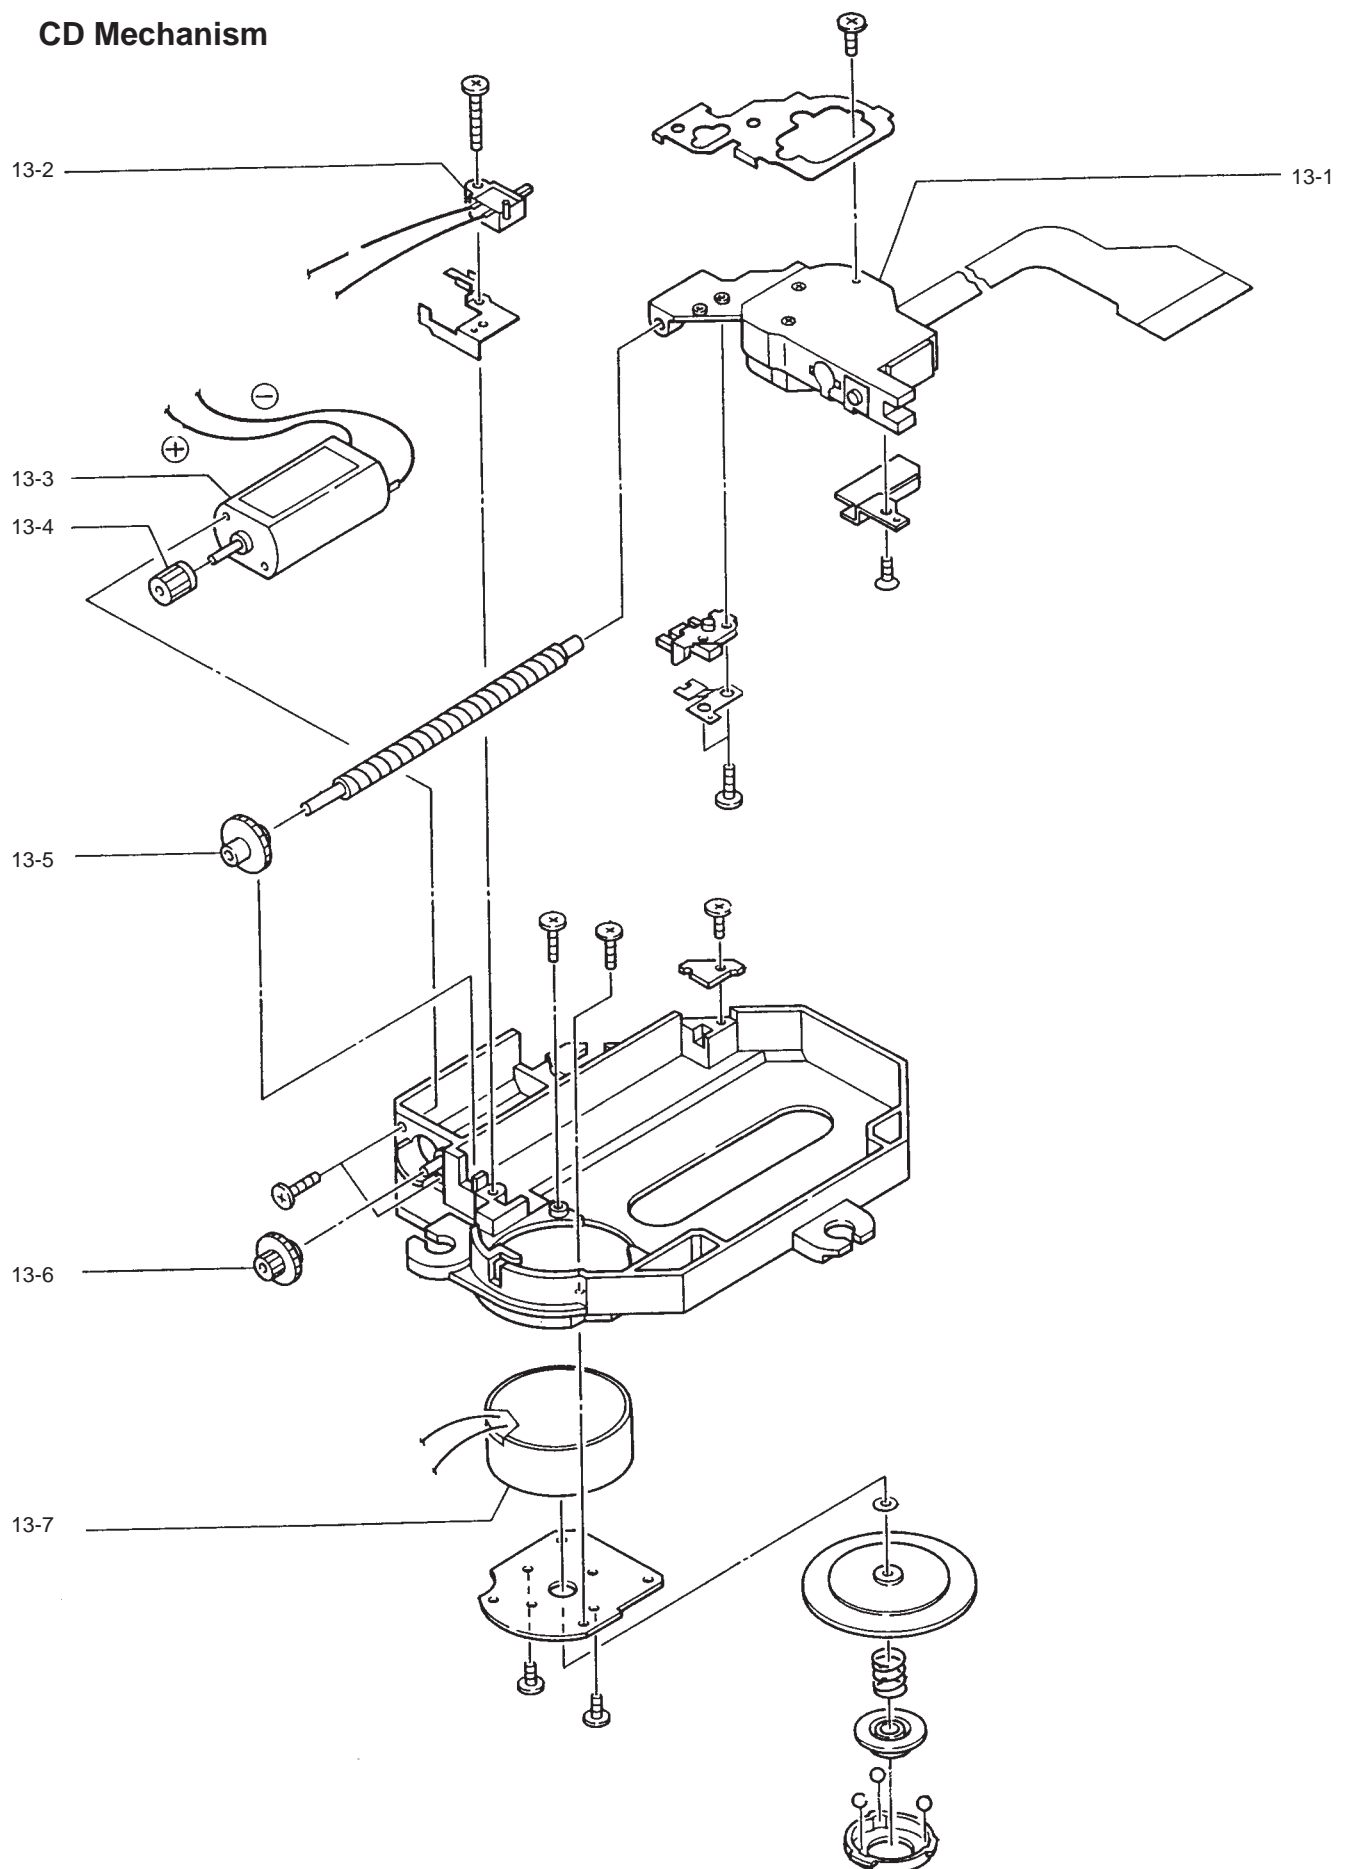

CASIO TECHNO CO.,LTD.
Service Division

8-11-10, Nishi-Shinjuku
Shinjuku-ku, Tokyo 160, Japan
Telephone: 03-3347-4926